


NOVA LUCE


9232250, 9232251

1

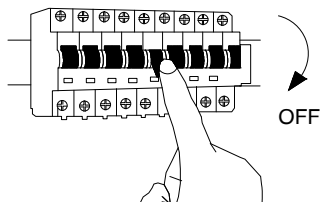


Turn off the general switch

2

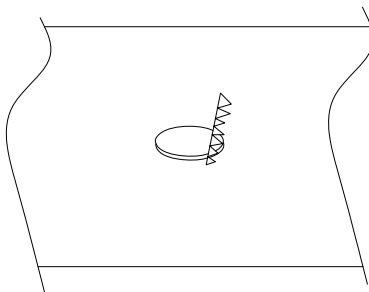


Create a 12 cm CutOut

3

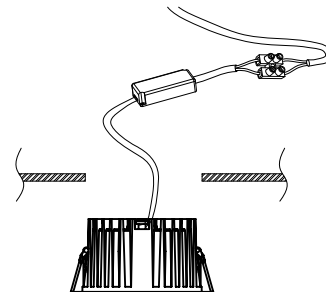


Connect the wires

4

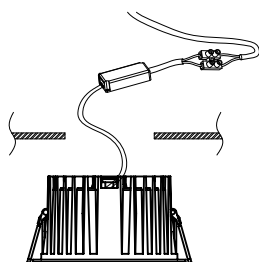

Place the luminaire into the hole

5

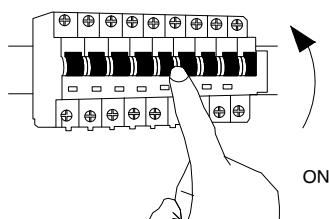

Turn on the general switch

