


NOVA LUCE


9186814

1

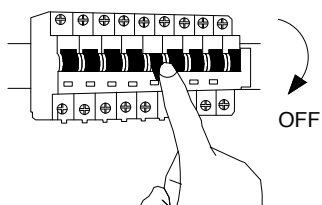


Turn off the general switch

2

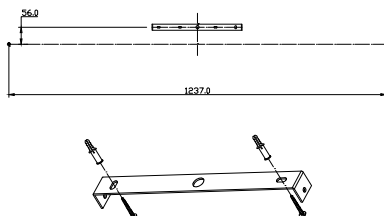


Drill, apply plastic Anchors with screws

3

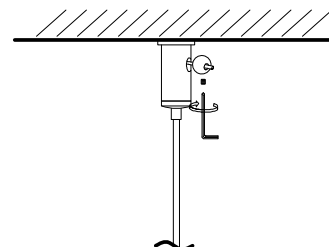


Fix the wire in place

4

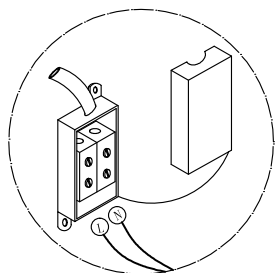


Connect the wires

5

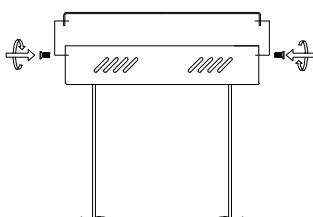

Apply the side screws

6

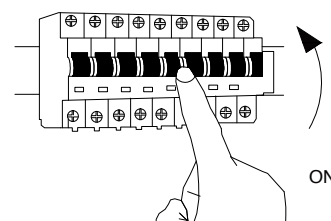

Turn on the general switch

