


# NOVA LUCE


9011102

1

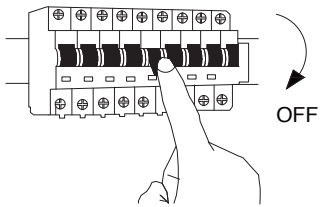


Turn off the general switch

2

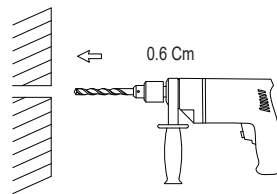


Drill hole with D: 0.6 cm

3

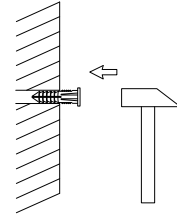


Apply plastic anchors

4

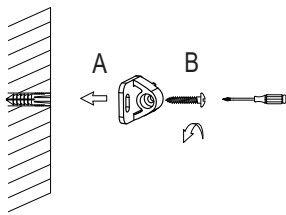


Place the part & the screw into place  
With a screwdriver

5

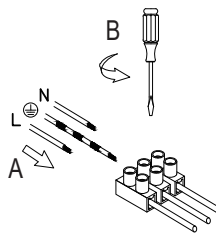


Connect the wires

6

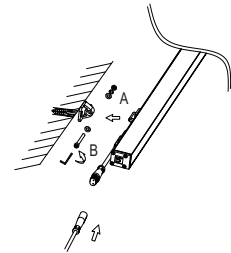

Place the product into place  
& Plug the cable

7

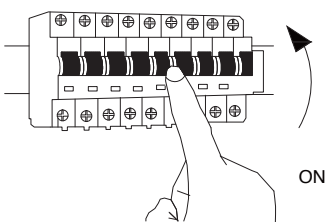

Turn on the general switch

