


# NOVA LUCE


9002687

1

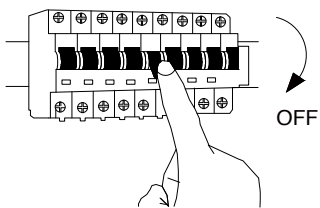


Turn off the general switch

2

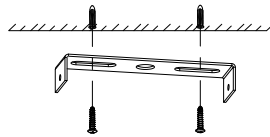


Drill holes & apply plastic anchors  
With screws

3

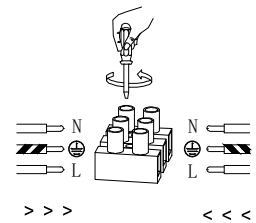

Connect the wires

4

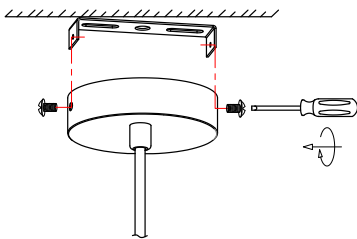


Apply the side screws

5



Apply the bulb

6

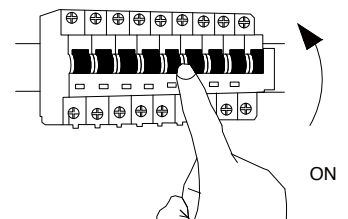

Turn on the general switch

