


# NOVA LUCE

9236520  
9236620

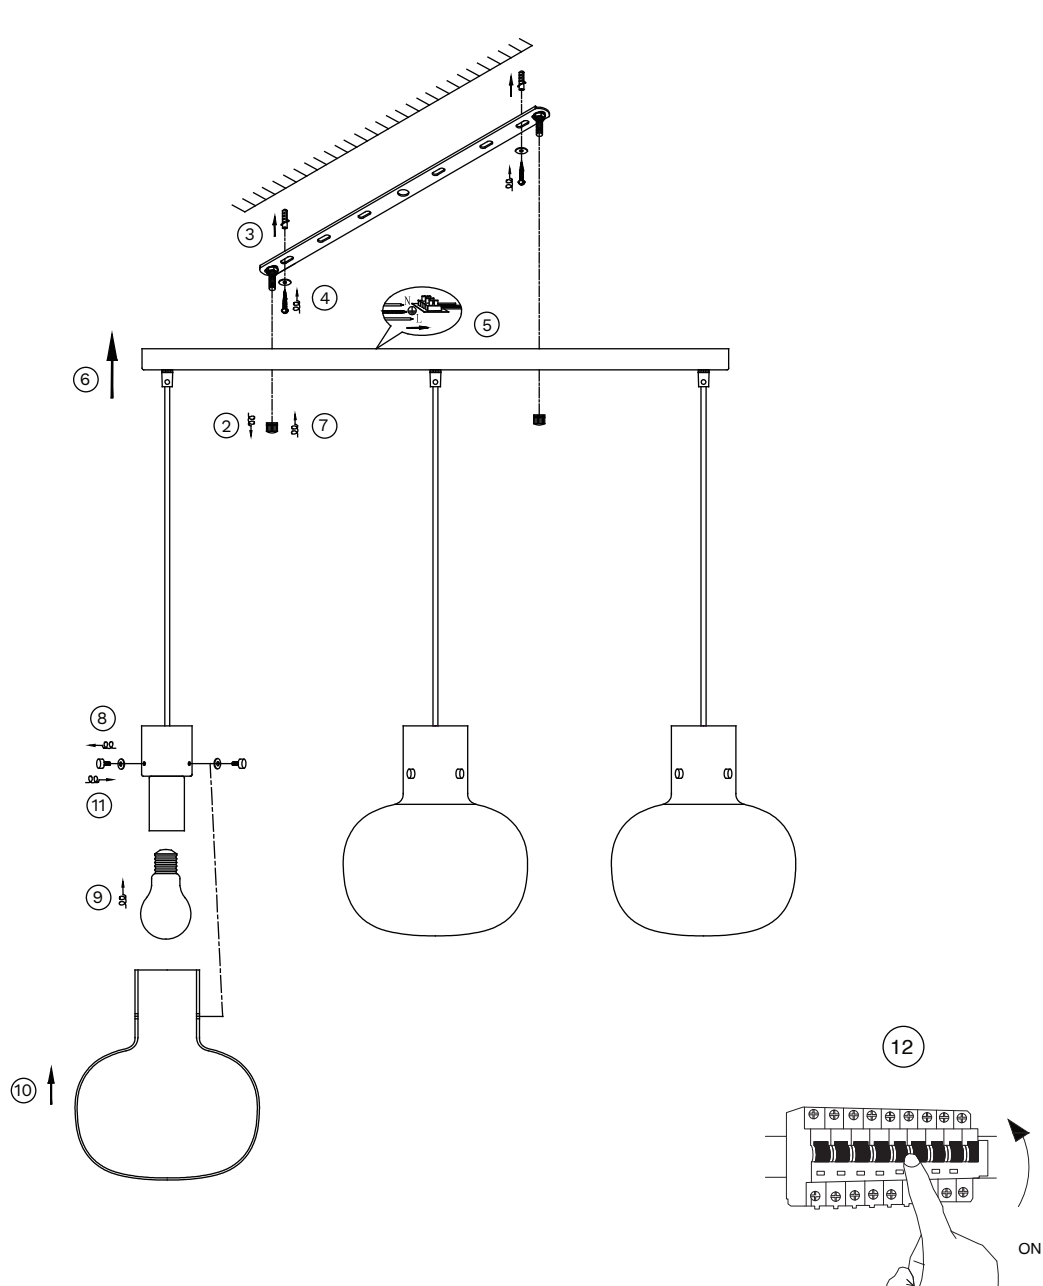

1. Turn off the general switch
2. Untight the top cap
3. Apply plastic anchors
4. Apply screws
5. Connect wires
6. Put the canopy in place
7. Tie up the top cap
8. Untie the screws
9. Apply the bulbs by rotate
10. Carefully place the caps into place
11. Tie up side screws
12. Turn on general switch

