


NOVA LUCE


9110351

1

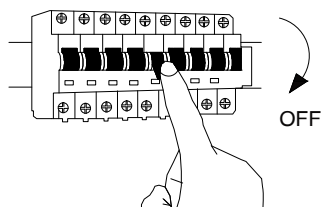


Turn off the general switch

2

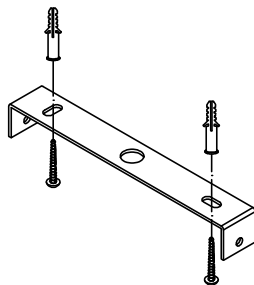


Mark where to drill holes

3

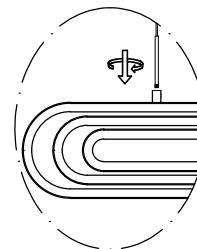

Drill holes on the marked areas

4

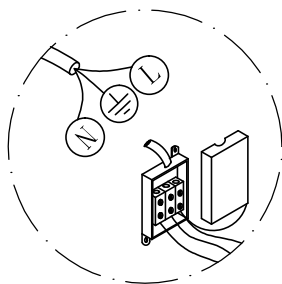


Connect wires

5



Tie up side screws
to make it stable

6

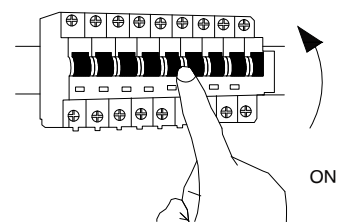

Turn on the general switch

7

