


# NOVA LUCE


9911524

1

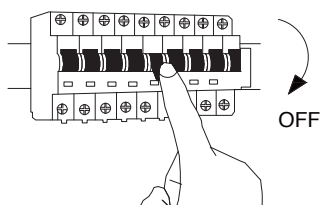


Turn off the general switch

2

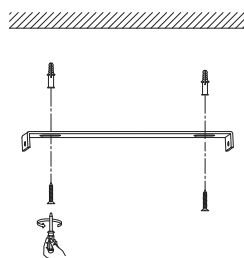


Drill holes & apply plastic anchors  
With screws

3

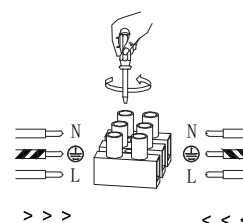


Connect the wires

4

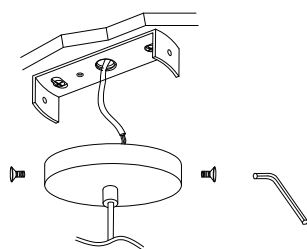


Apply the side screws

5

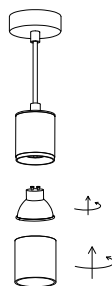

Apply the bulb with the cap

6

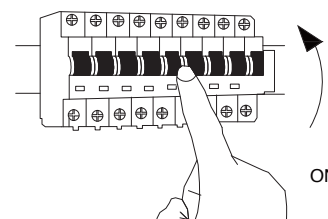

Turn on the general switch

