



NOVA LUCE

6208

1

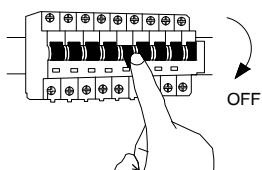

Turn off the general switch

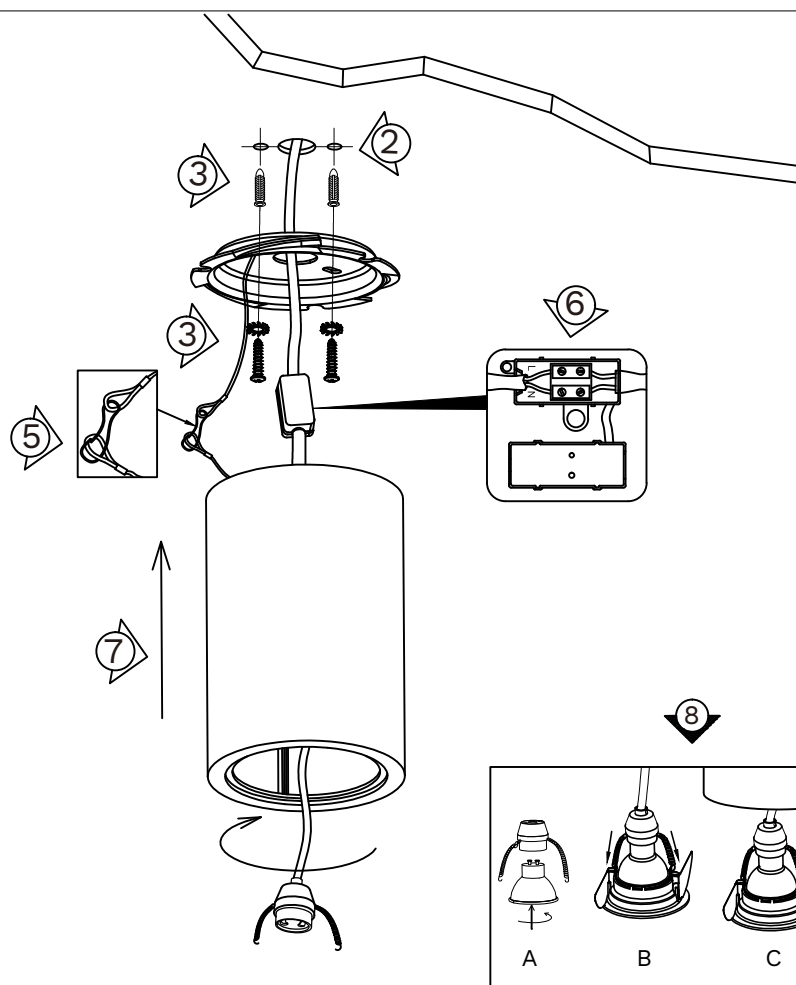

2. Create a Cut Out

3. Align, mark & drill holes.
Apply plastic holes

4. Place the nuts & tie up the screws
to fix it place


5. Connect the assisting hoops

6. Connect wires


7. Fix it in place

8. Apply the bulb by rotate
& adjust the brackets to put it place

9

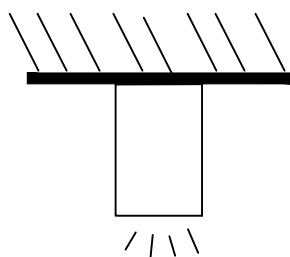

10

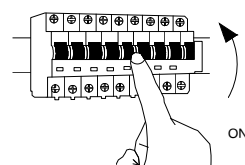

Turn on the general Switch

