


NOVA LUCE

9030103 9030102 9030105


2X  2X  1X  2X 

1

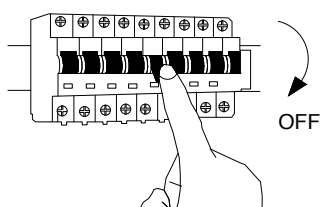


Turn off the general switch

2




Dismantle the product

3

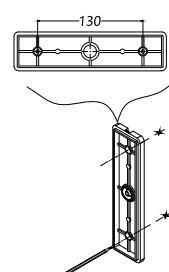


Mark where to drill

4

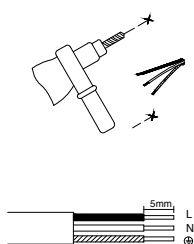

Make sure to have the
Cables in the center

5

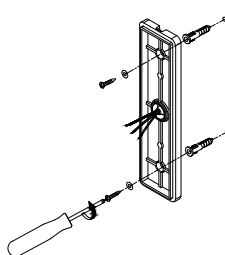


Drill holes apply plastic anchors
With screws

6




Connect wires

7


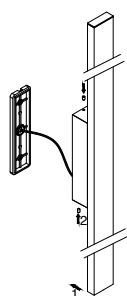


Put it in place & apply
The side nuts

8

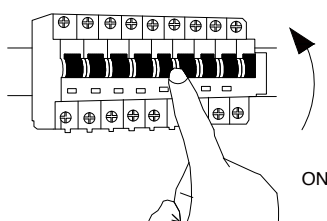

Turn on the general switch



www.novaluce.com