


# NOVA LUCE


9009131

1

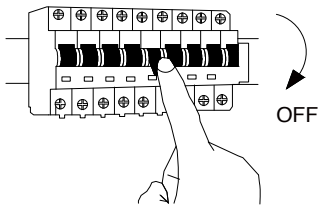


Turn off the general switch

2

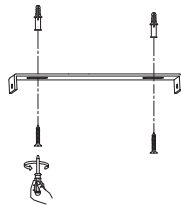


Drill holes & apply plastic anchors  
With screws

3

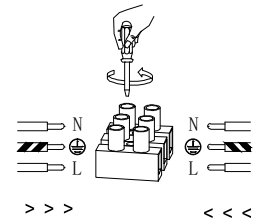


Connect the wires

4

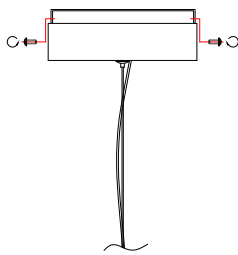


Apply the side screws

5

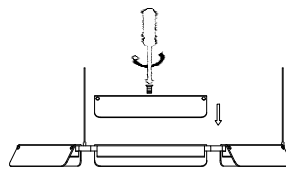


Put the glass into place & apply  
The screw

6

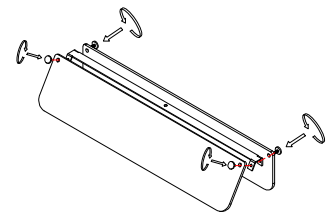

By rotating apply the  
Remaining piece

7

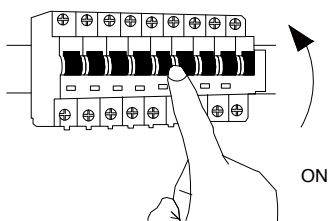

Turn on the general switch

