


# NOVA LUCE


8105620

1

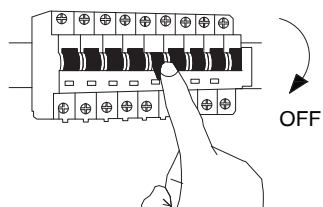


Turn off the general switch

2

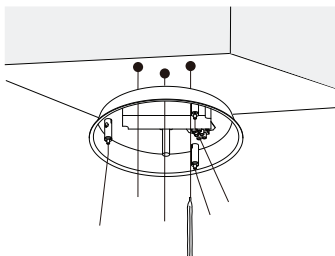


Mark where to drill holes

3

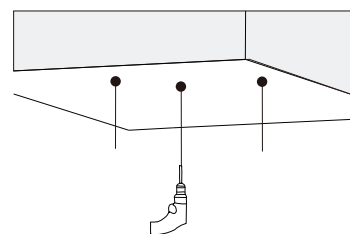


Drill on the marked areas

4

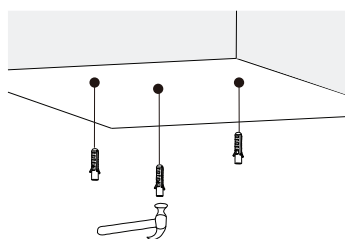


Apply plastic anchors

5

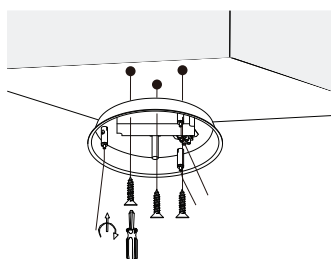


Apply screws

6

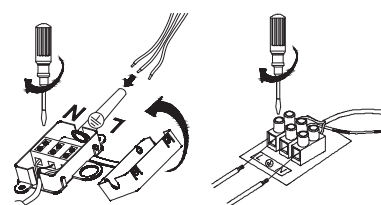


Connect the wires

7

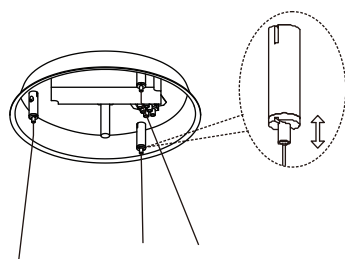


Adjust the product

8

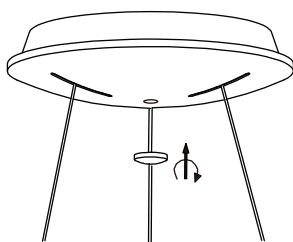

By rotating apply the cap

9

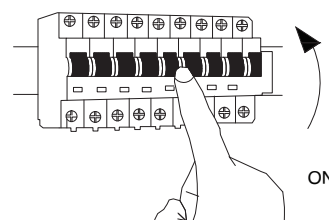

Turn on the general switch

