


NOVA LUCE


9104713 9104714

1

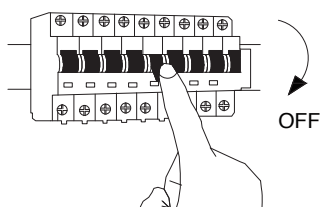


Turn off the general switch

2

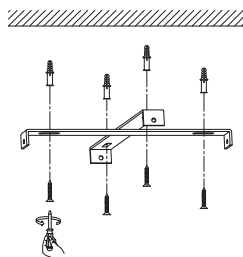

Drill holes & apply plastic anchors
With screws


3

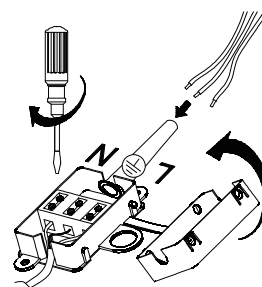

Connect the wires

4


CCT SWITCH
Color temperature switch



Warning:
Please not to change
color when power on.


control the CCT switch when off

5

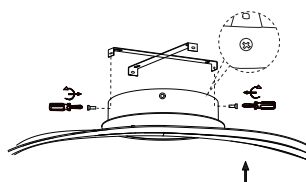

Apply the side screws

6

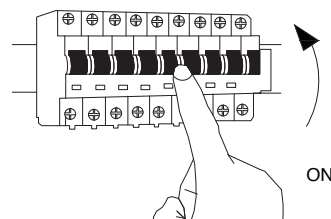

Turn on the general switch

