



# NOVA LUCE


9345657

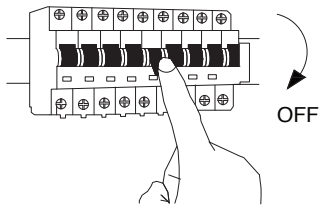


1. Turn off the general switch

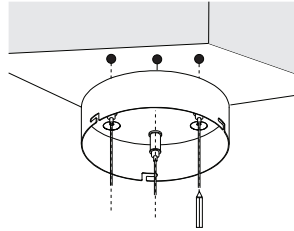


2. Mark the areas to drill

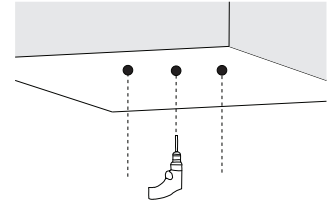


3. Drill holes on the marked areas

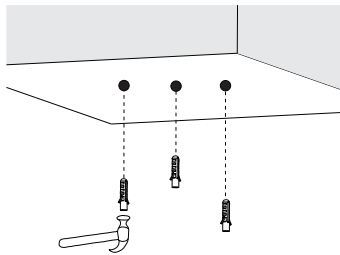


4. Apply plastic anchors

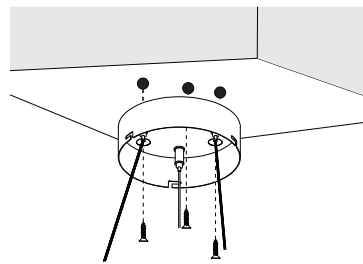


5. Apply screws

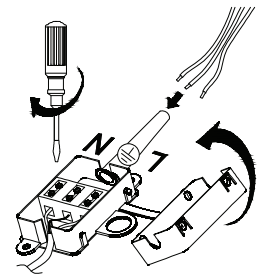


6. Connect the wires

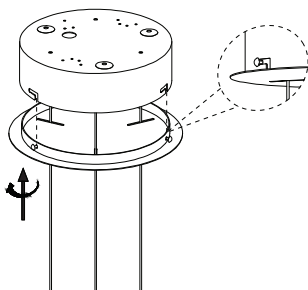

7. Put the canopy in place

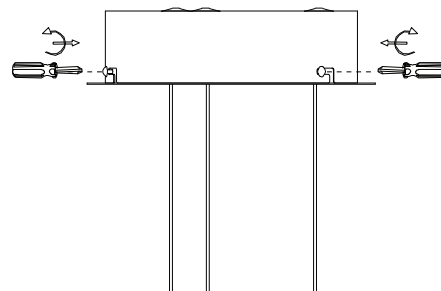

8. Apply the side screws

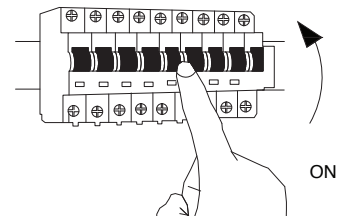

9. Turn on the general switch

