


# NOVA LUCE


9058111 / 9058112 / 9058113 / 9058114 / 9058115  
9058116 / 9058117 / 9058118

## Recessed Installation

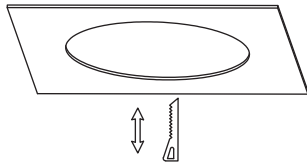


Ø625mm/Ø825mm/Ø1025mm


Create a CutOut ①

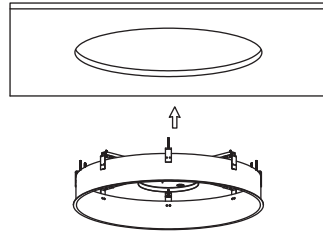


Put it in place ②

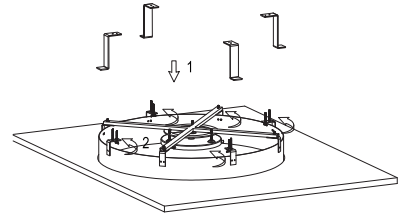


Tie up parts together ③

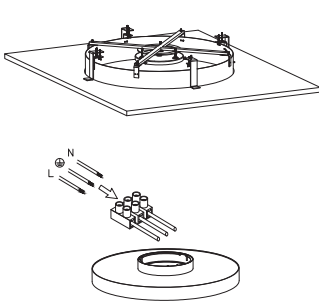

Connect wires ④

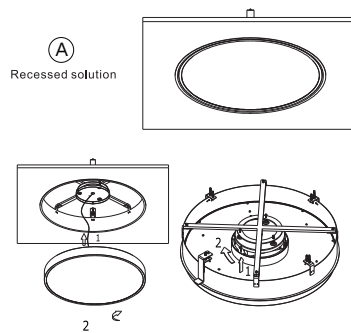


Tie up the screws & fix it in place by rotating ⑤

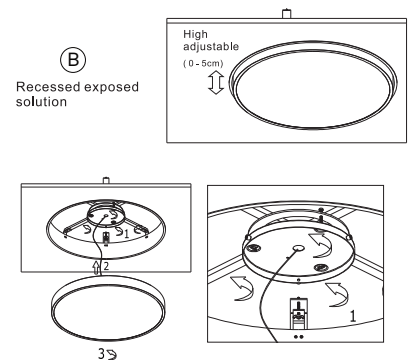


Tie up the screws & fix it in place by rotating ⑥

9058123 / 9058124 / 9058125 / 9058126

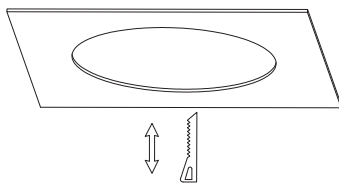


Ø470mm/Ø670mm


Create a CutOut ①

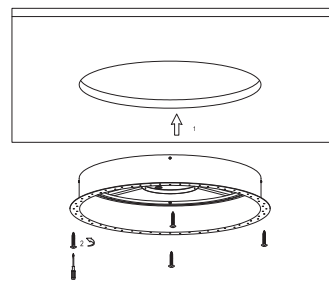


Tie up screws ②

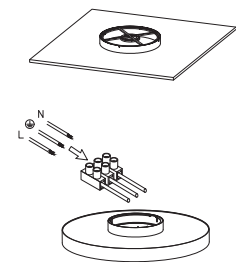


Connect wires ③

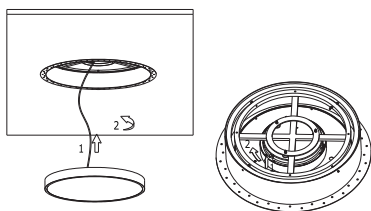

Put it in place ④

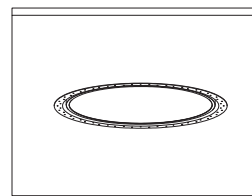

Apply a sealer ⑤

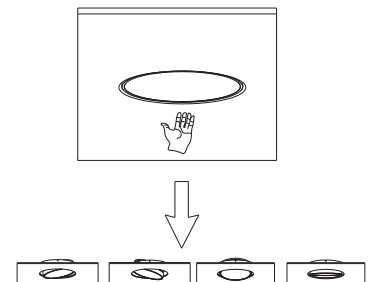

Adjust it in the desirable degrees ⑥

