


# NOVA LUCE


9010021, 9010023

1

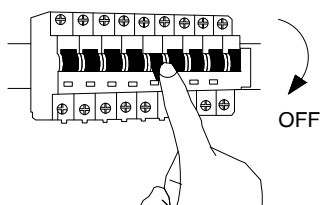


Turn off the general switch

2

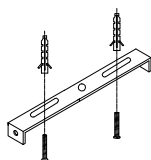


Align, mark and drill holes  
apply the screws & tie up screws

3

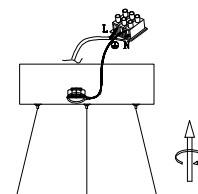


Connect the wires

4

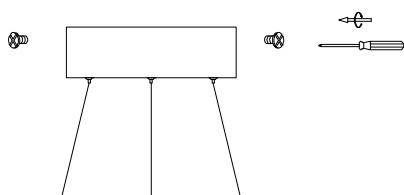

Apply the side screws

5

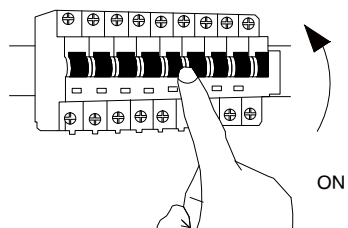

Turn on the general switch

