


# NOVA LUCE


9511017

1

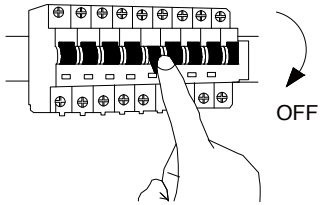


Turn off the general switch

2

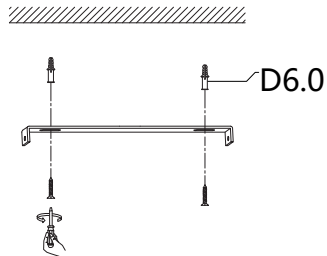


Drill holes & apply plastic anchors  
With screws

3

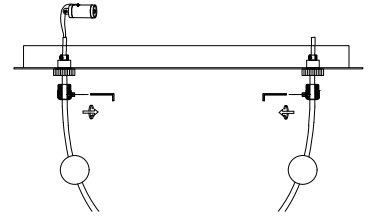


Untight the screws

4

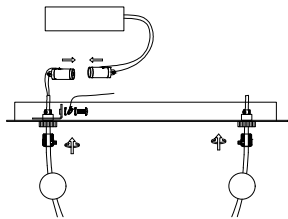


Connect the plug  
& Tight up the caps

5

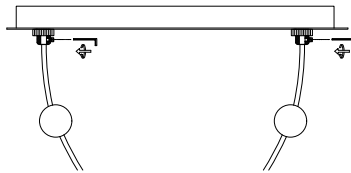


By rotating apply the screws

6

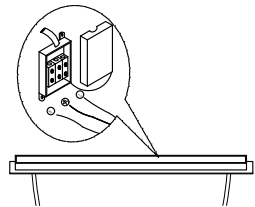


Connect the wires

7

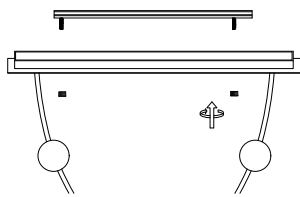


Place the canopy in to place  
& Apply the bottom caps

8

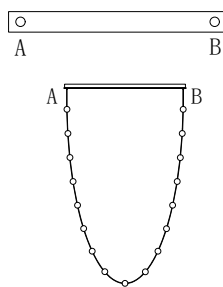

Positioning Map

9

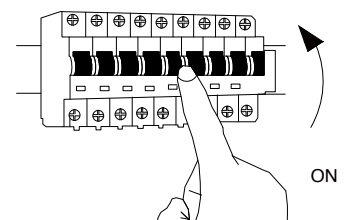

Turn on the general switch

