


NOVA LUCE


9002667

1

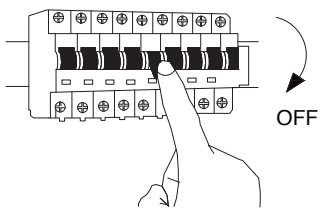


Turn off the general switch

2

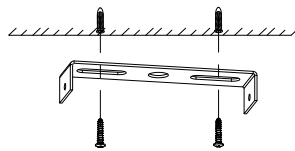


Align, mark, drill holes
& Apply the screws

3

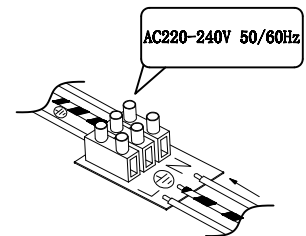


Connect the wires

4

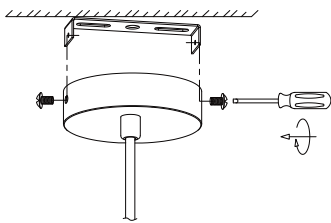


Apply the side screws

5

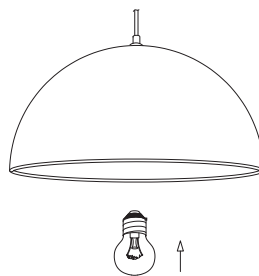

Apply the bulb

6

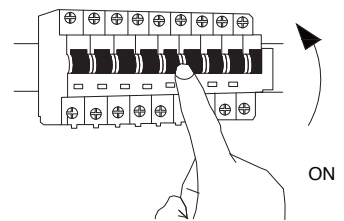

Turn on the general switch

