

# NOVA LUCE


9731216

1



Turn off the general switch

2

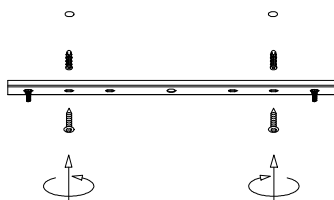


Drill holes & apply plastic anchors  
With screws

3




Connect the wires

4

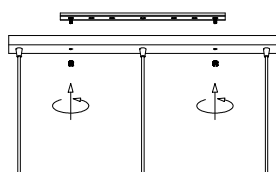


Apply the bottom caps

5




Apply the bulb by rotating

6



By rotating apply  
The remaining part

7

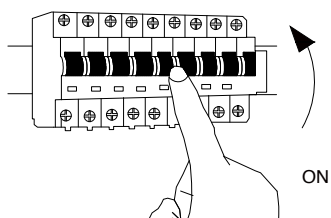

Turn on the general switch

