



# NOVA LUCE


9088217, 9088218

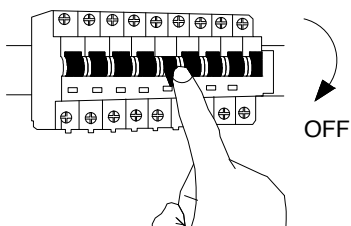


1. Turn off the general Switch

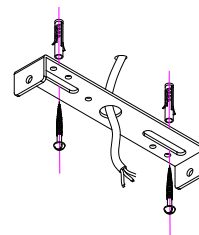


2. Align, mark and drill holes to apply the screws

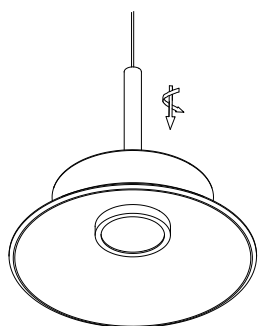


3. Assemble the tube by rotating them

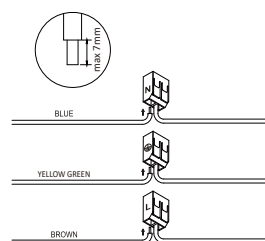

4. Connect the 3 wires

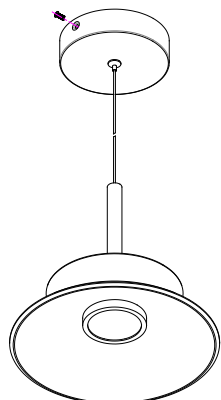

5. Apply the side screws

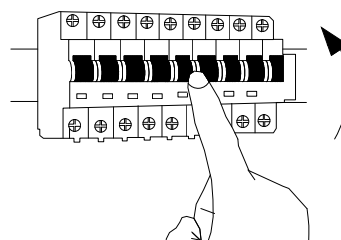

6. Turn on the general Switch

