


NOVA LUCE



9181200

1

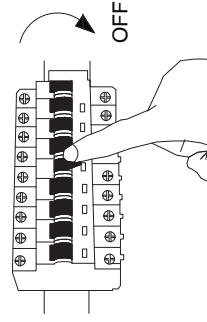


Turn off the general switch

8

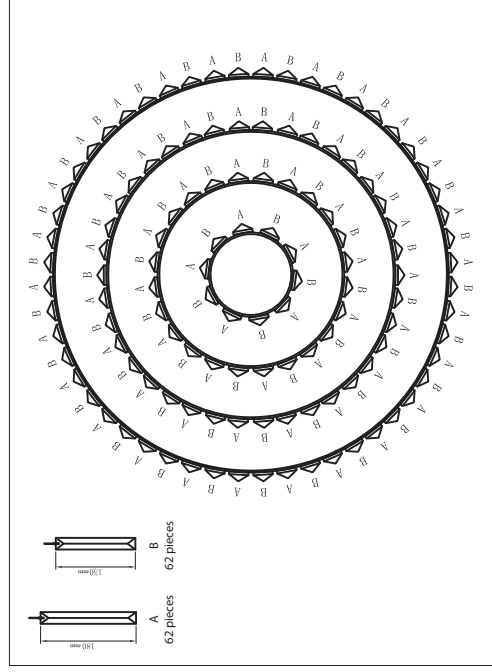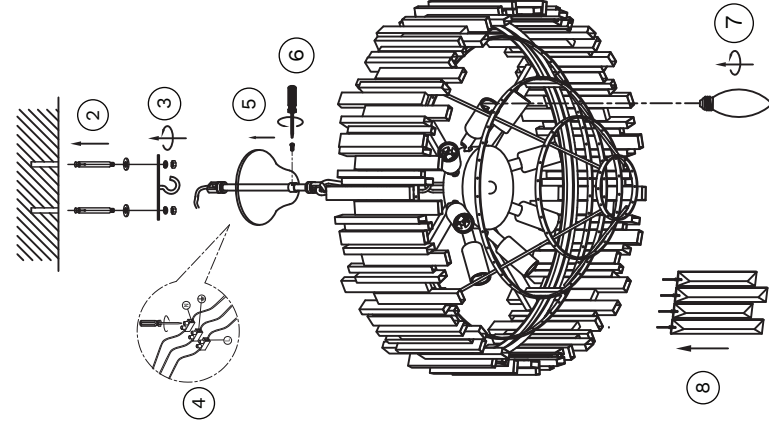

2. Align, mark & drill holes & apply plastic anchors
3. Tie up nuts & screws
4. Connect wires
5. Place the canopy into place
6. Tie up side screws
7. Insert the bulbs by rotate
8. Apply the crystals

8

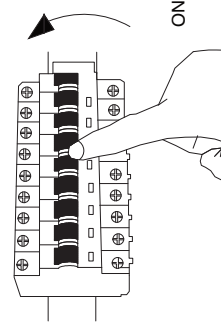

Turn on the general switch

