


NOVA LUCE


9919110
9919111 9919112

1

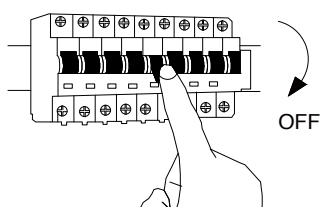


Turn off the general switch

2

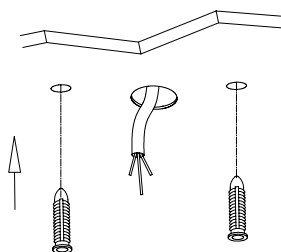


Drill holes & apply plastic anchors
With screws

3

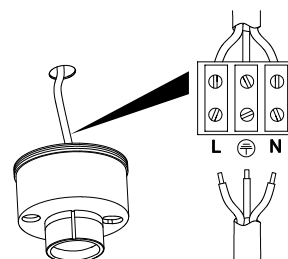


Connect the wires

4

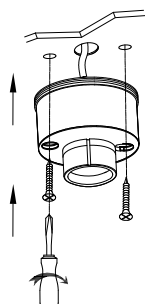


Apply the side screws

5

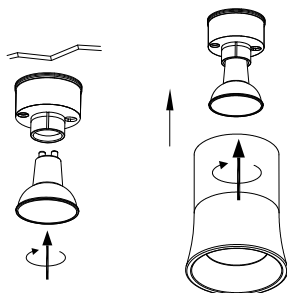

Apply the bulb with the part

6

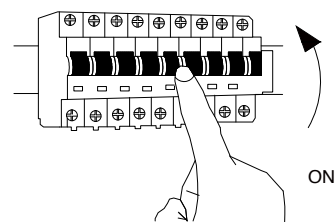

Turn on the general switch

