
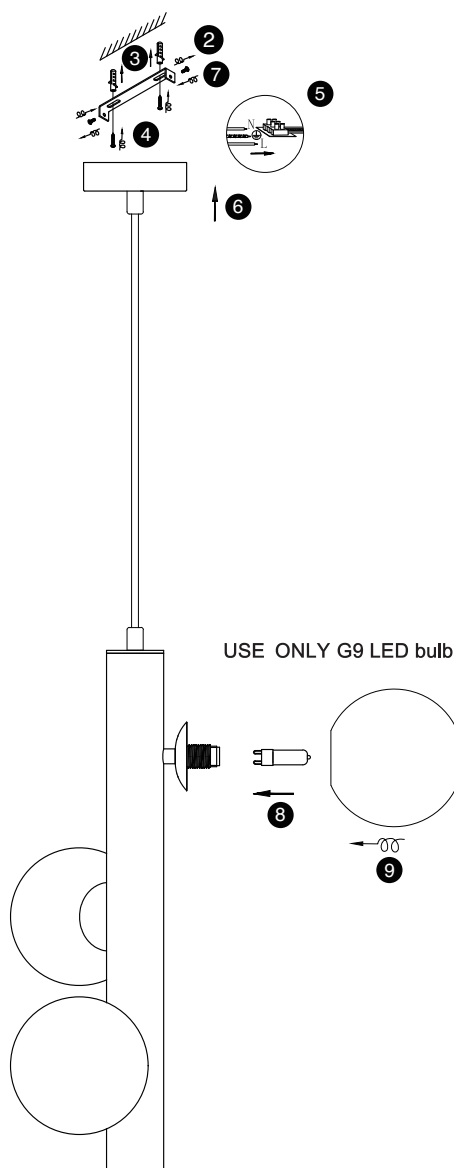
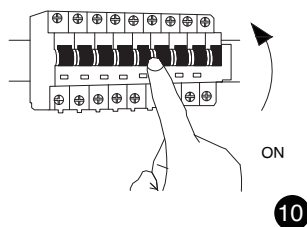


NOVA LUCE

9724581

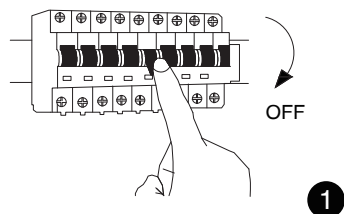

1. Turn on the general switch
2. Untighten the screws
3. Drill & make holes, apply plastic anchors
4. Apply screws
5. Connect the wires

6. Apply the canopy into place
7. Apply side screws
8. Insert only G9 bulb
9. Apply the acrylic
10. Turn on general switch

