


NOVA LUCE


9081211

1

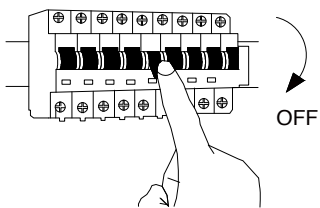


Turn off the general switch

2

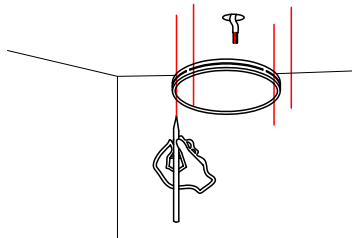


Mark the areas where to drill

3

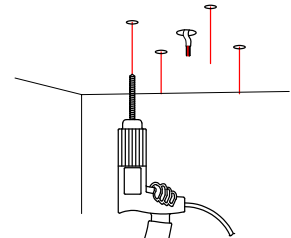


Drill holes in the marked areas

4

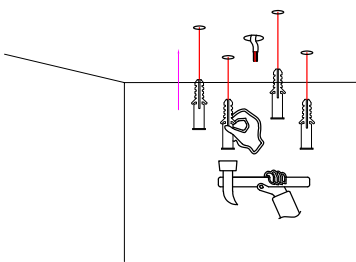


Apply plastic anchors

5

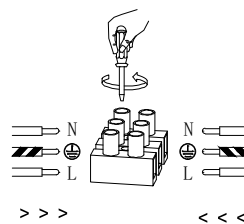


Connect wires

6

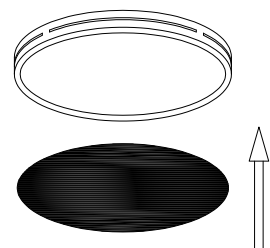

Apply the shade

7

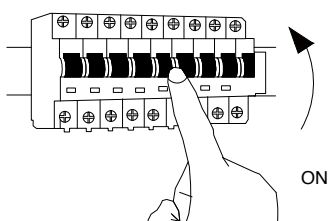

Turn on the general switch

