


NOVA LUCE


9081210

1

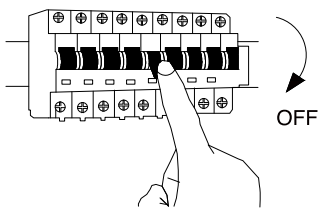


Turn off the general switch

2

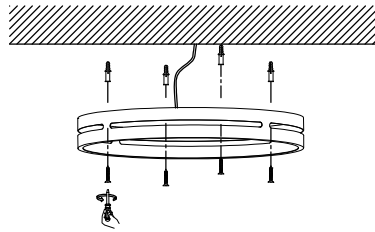


Drill holes & apply plastic anchors
With screws

3

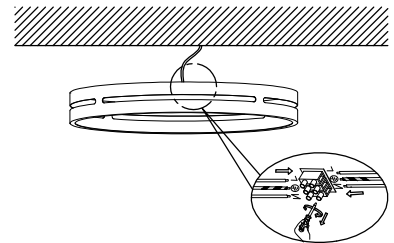


Connect wires

4

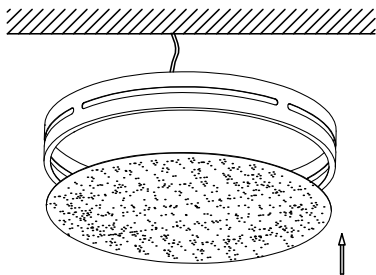

Apply the product in place
With the element

5

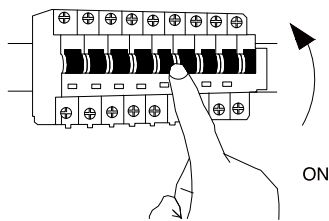

Turn on the general switch

