


# NOVA LUCE


9019786

①

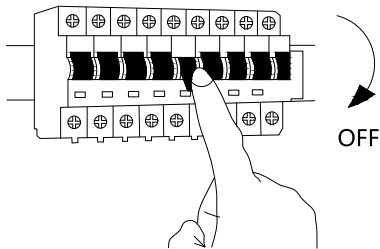


Turn off the general Switch

②

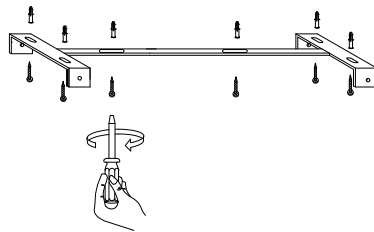


Drill holes & apply plastic anchors  
With screws

③

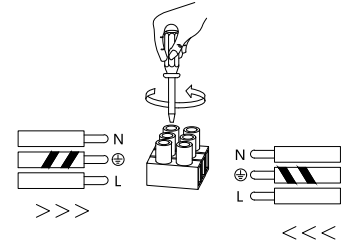


Connect the wires

④

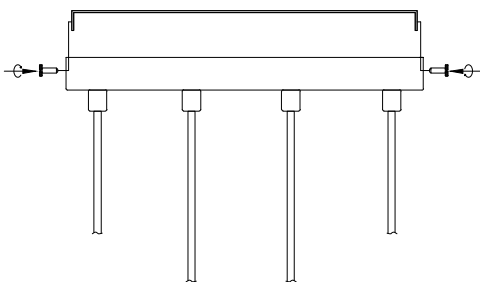


Apply the side screws

⑤

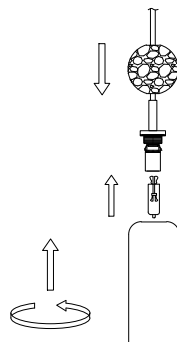

By rotating  
Apply the glass into place

⑥

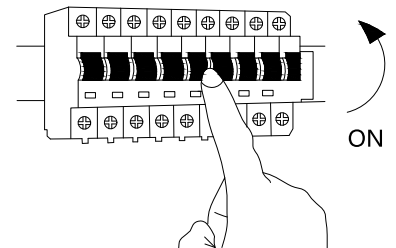

Turn on the general switch

