


# NOVA LUCE


9130645 9130646

1

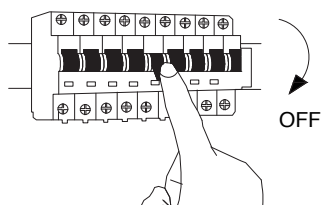


Turn off the general switch

2

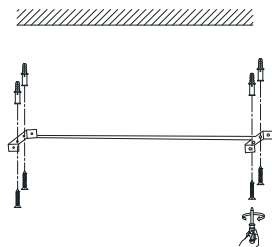


Drill holes & apply plastic anchors  
With screws

3

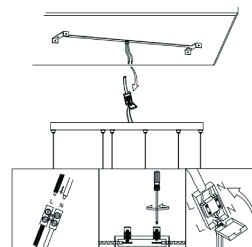


Connect the wires

4

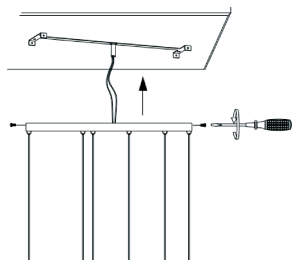


Apply the side screws

5

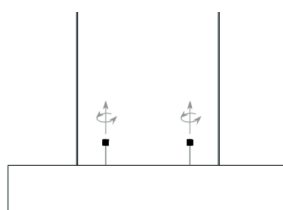


Screw off the bolts

6

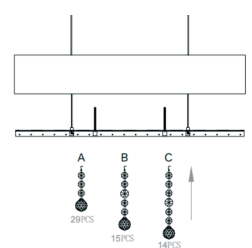


1.hang the crystal to the metal hole  
2. Place the metal piece into the lamp body

7

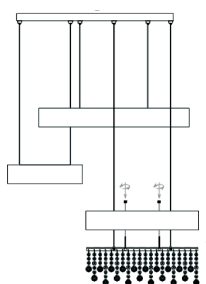

Tighten the bolts

8

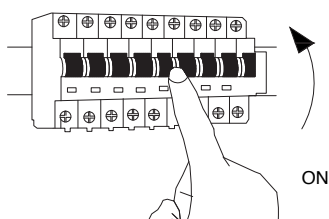

Turn on the general switch

