


# NOVA LUCE


9236229 9236230  
236231

1

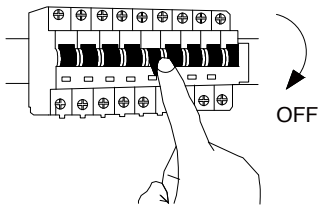


Turn off the general switch

2

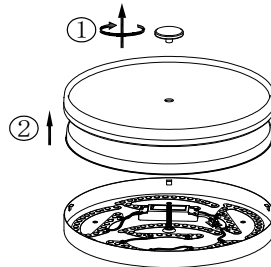


Remove the shades

3

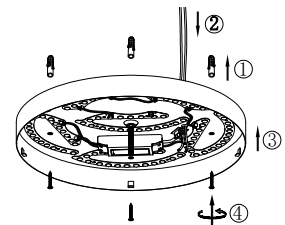


Drill holes & apply plastic anchors  
With screws

4

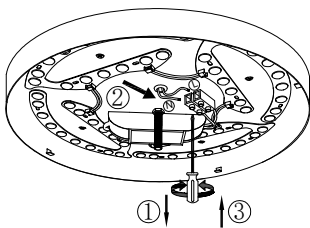


Connect the wires

5

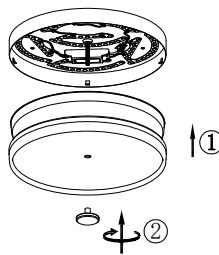

Apply the shades

6

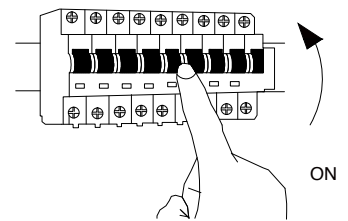

Turn on the general switch

