


**ATTENTION: FOR THIS OPERATION YOU HAVE TO CUT OFF THE POWER**


**MAXIMUM**  
48V DC

# NOVA LUCE


Step:1

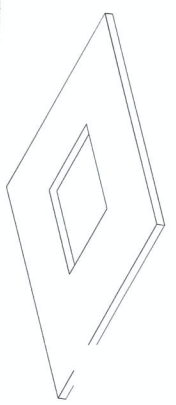

Cut out

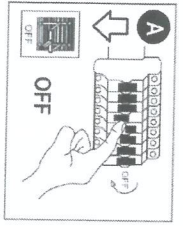


Step:4

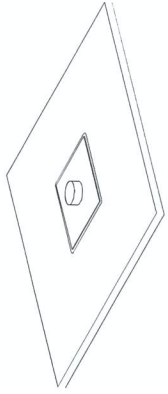

Fill up the wall cracks before plastering the pass.


Step:2

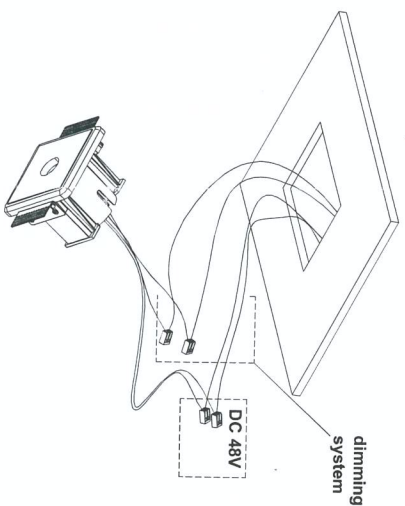


dimming system

DC 48V


Step:5

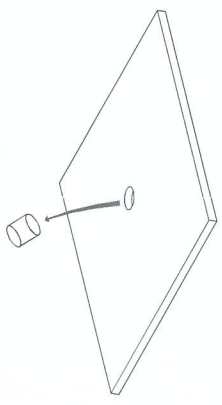


Step:3

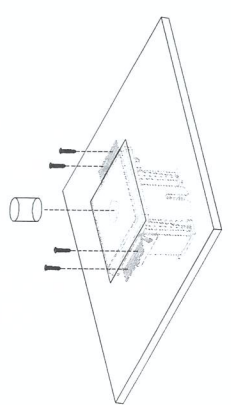

Step:6

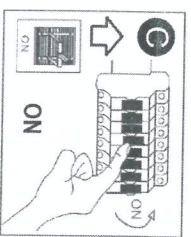

Finish

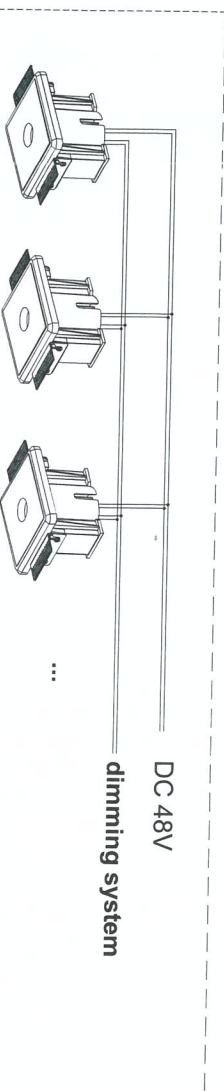

9492800