


NOVA LUCE


9919603

1

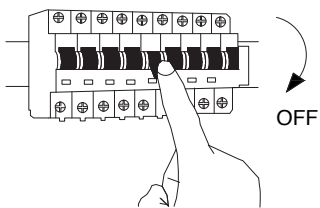


Turn off the general switch

2

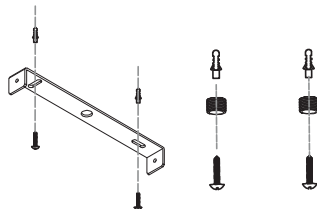


Drill holes & apply plastic anchors
With screws

3

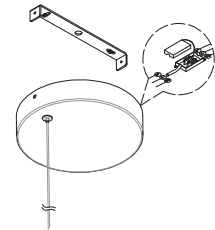


Connect the wires

4

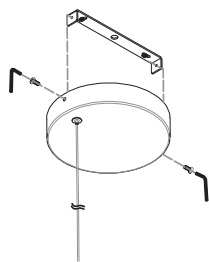


Apply the side screws

5

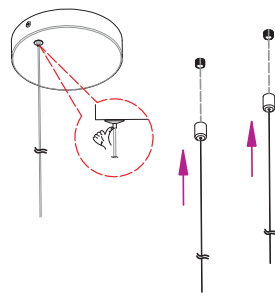


Adjust the wire

6

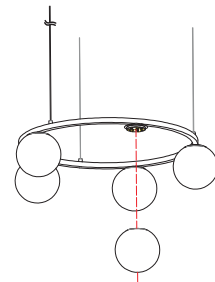

Apply the glass in to place

7

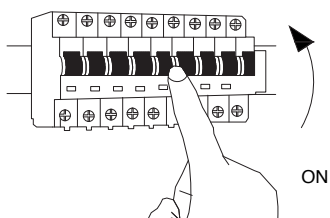

Turn on the general switch

