


NOVA LUCE


9088146

1

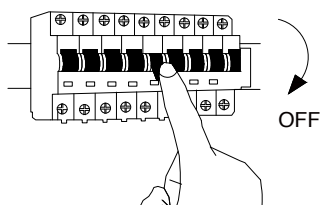


Turn off the general switch

2

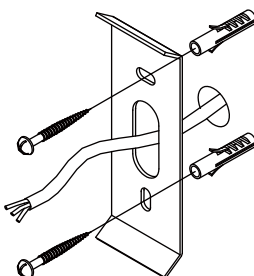


Drill holes & apply plastic anchors
With screws

3

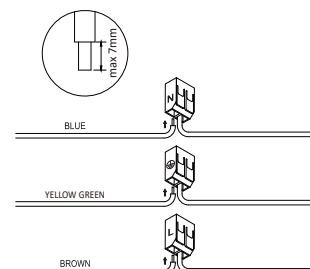


Connect the wires

4

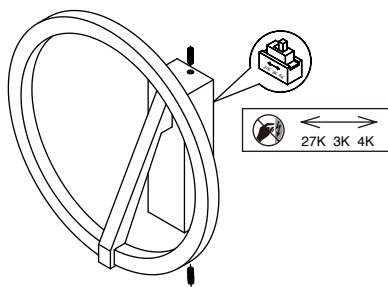

Apply the side screws
& control the CCT switch

5

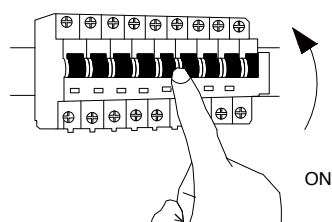

Turn on the general switch

