


# NOVA LUCE

9002867 9002868

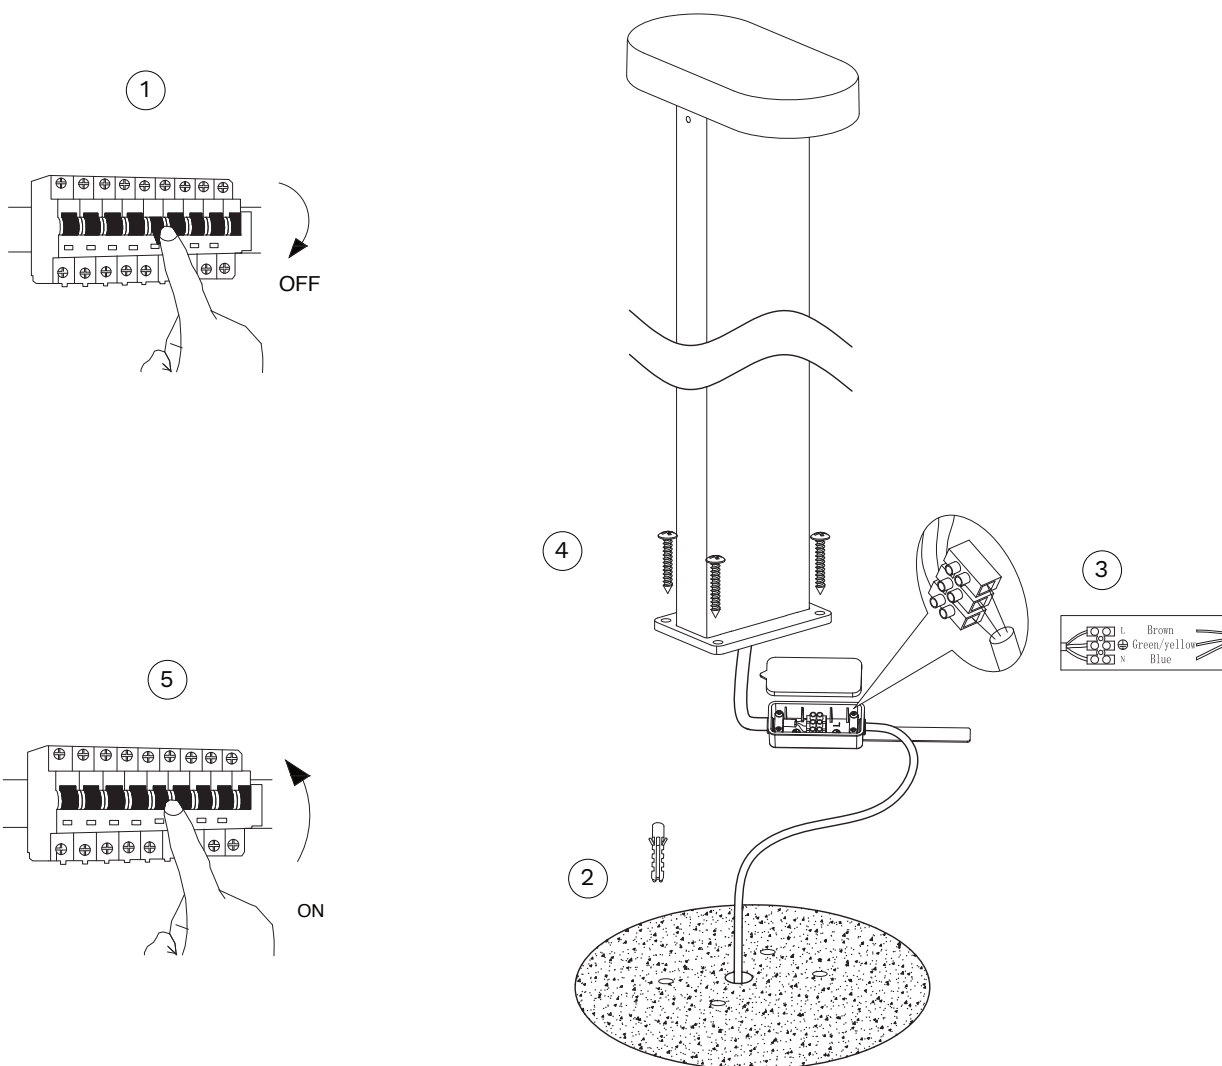

1. Turn OFF general switch
2. Drill holes & apply plastic anchors
3. connect the wires
4. Apply screws
5. Turn ON general switch

