



NOVA LUCE


9050705 9050706

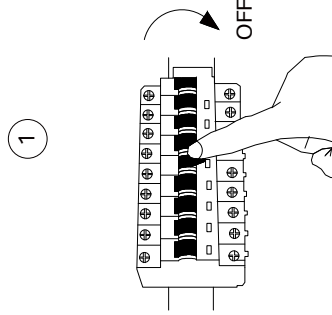


Turn off the general switch

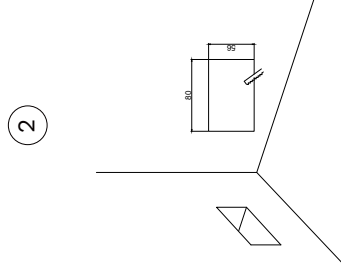


Make a cut out 80x56

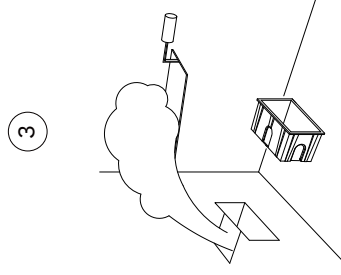

After removing the access,
Apply it in place

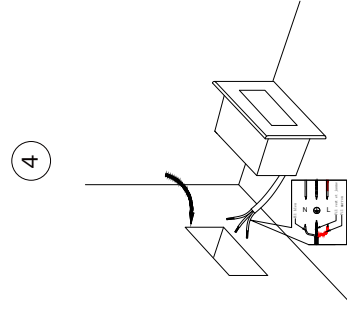

Connect the wires

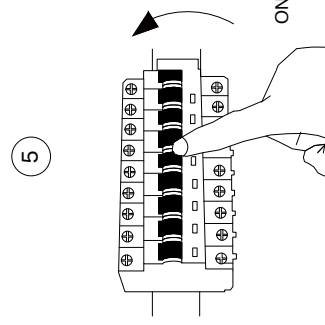

Turn on the general switch

