


# NOVA LUCE


9214205

1

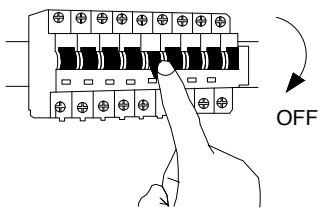


Turn off the general switch

2

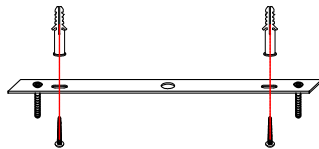


Drill holes & apply plastic anchors  
With screws

3

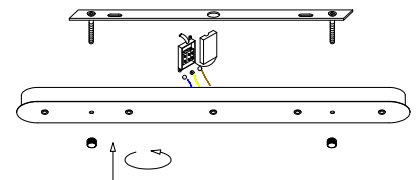


Connect the wires

4

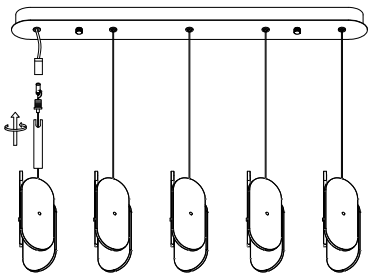

Connect the elements in to place

5

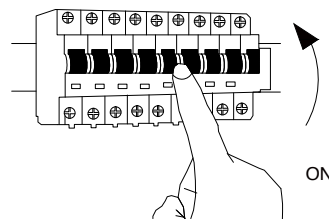

Turn on the general switch

