



NOVA LUCE


9333071

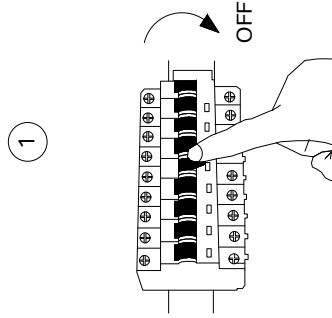


Turn off the general switch

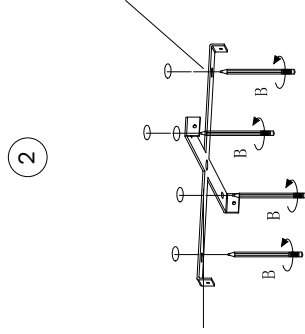


Mark where to drill

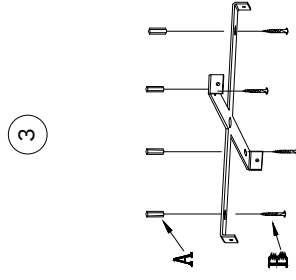


Apply plastic anchors with screws

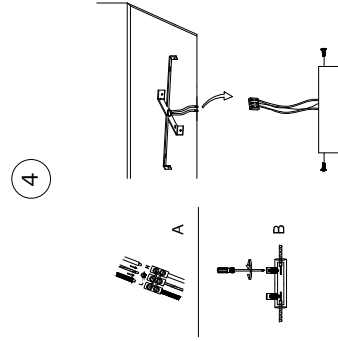

Connect the wires

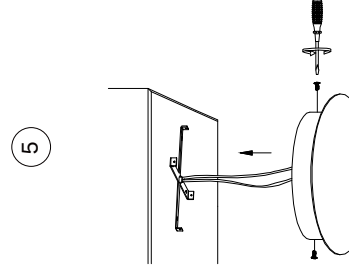

Apply the side screws

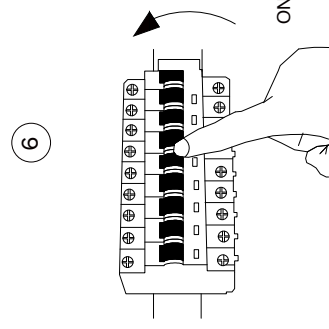

Turn on the general switch

