


NOVA LUCE

9241160

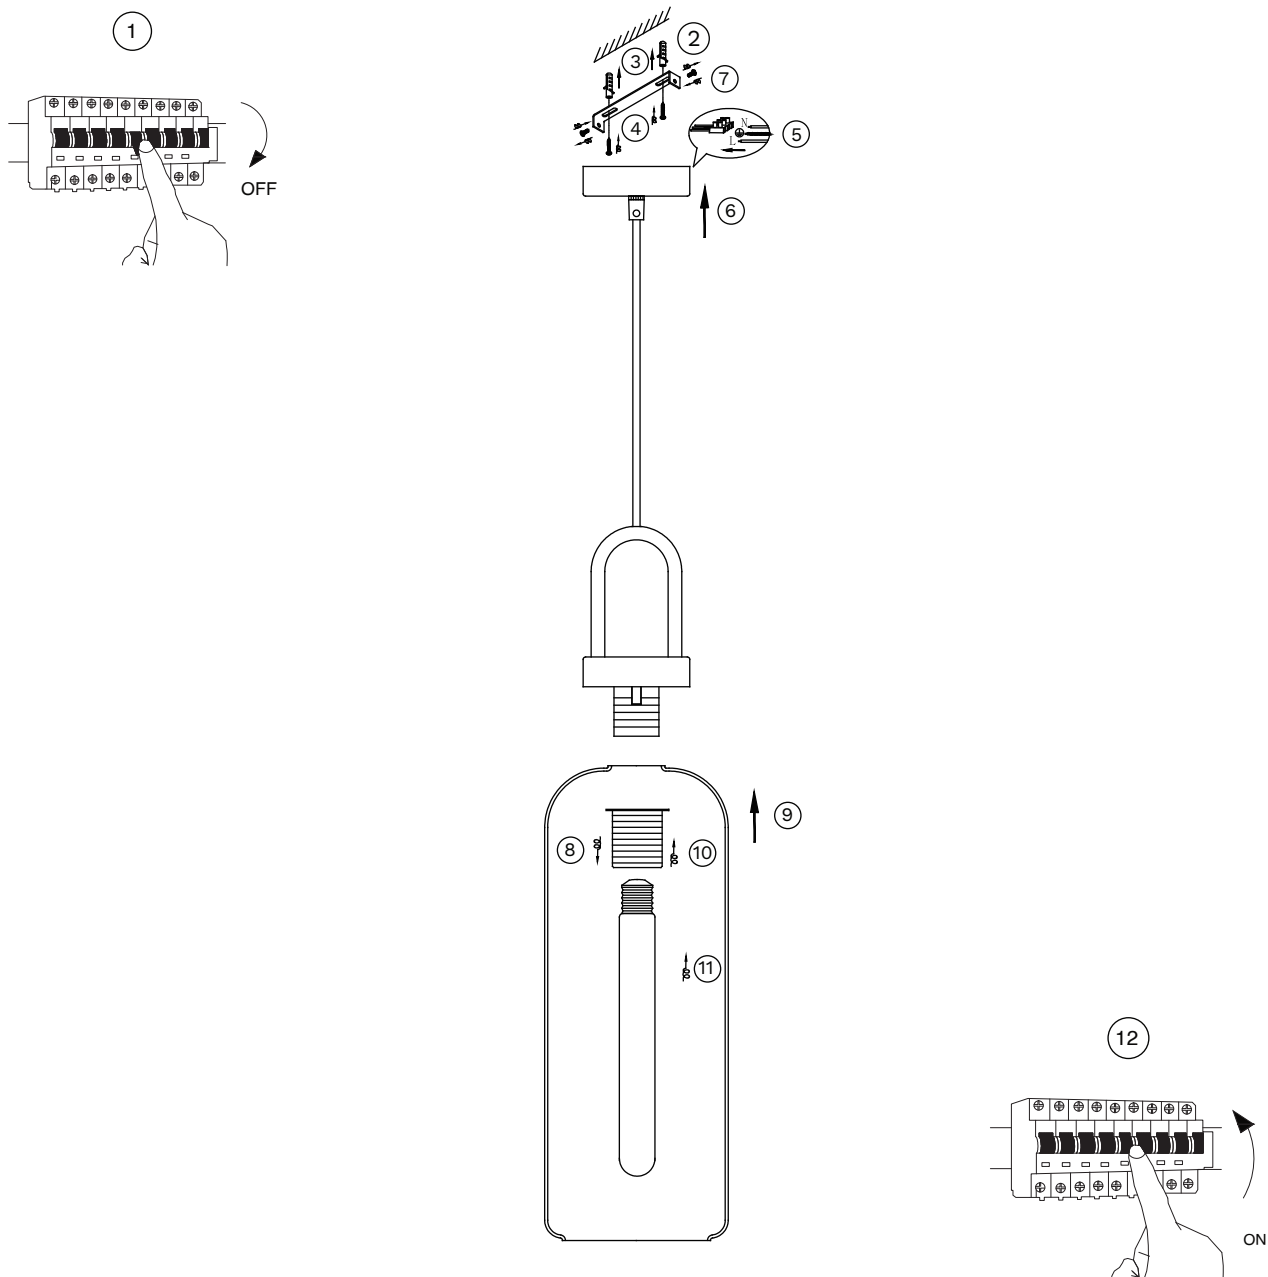

1. Turn off the general switch
2. Untight the top cap
3. Drill holes apply plastic anchors
4. Apply screws
5. Connect wires
6. Put the canopy in place
7. Tie up screws
8. By rotating untight the socket
9. Place the cap into place
10. Tie up the socket
11. Apply the bulb by rotate
12. Turn on general switch

