

# NOVA LUCE


9054441

1




Turn off the general switch

2

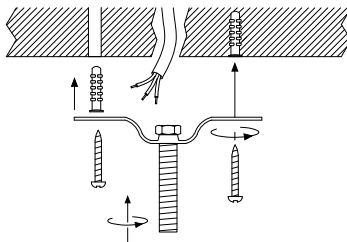


Drill holes & apply plastic anchors  
With screws

3

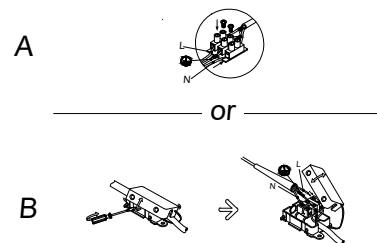


Connect the wires

4

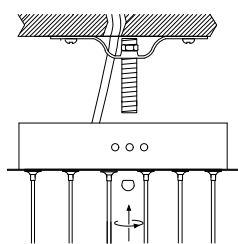


Apply the canopy in place

5

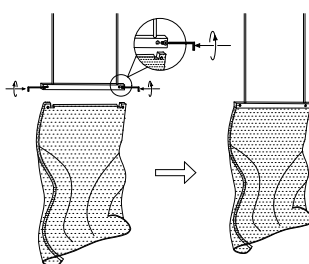


Apply the glass in to place

6

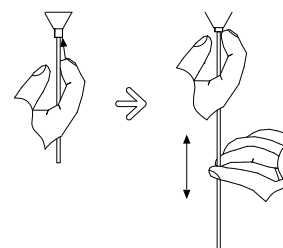

Adjust the wires

7

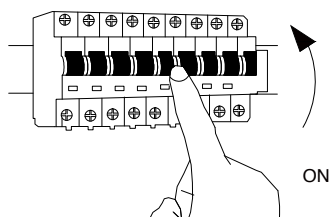

Turn on the general switch

