


# NOVA LUCE


9011761/ 9011762

1

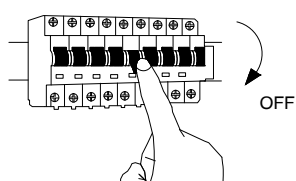


Turn off the general switch

2

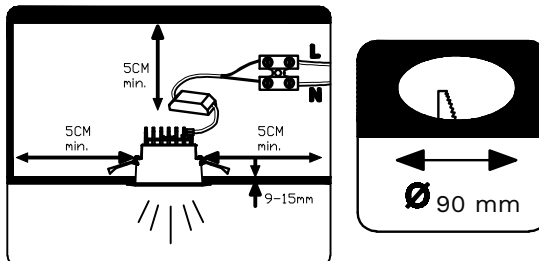

Create a CutOut

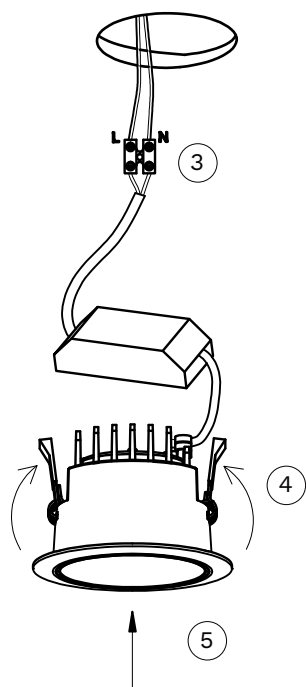


3. Connect wire

4. Press the brackets together to put it in place

5. Press the luminaire into the hole to make it stable

6

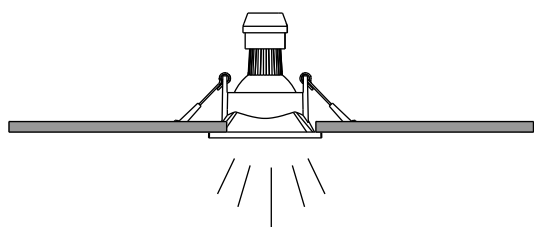

Turn on the general Switch

7

