


# NOVA LUCE


9053591 9053592 9053593  
9053594 9053460 9053560

1

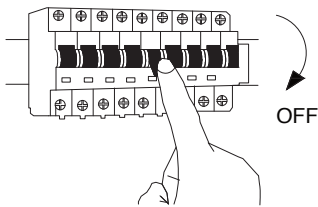


Turn off the general switch

2

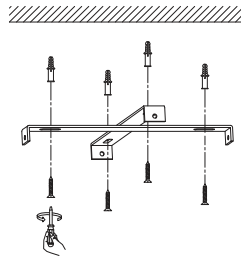


Drill holes & apply plastic anchors  
With screws

3

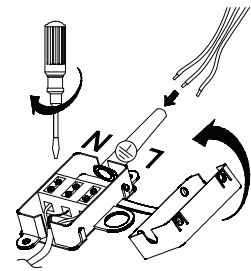


Connect the wires

4

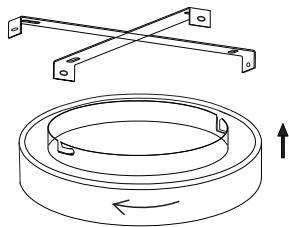


Place the product in to place  
By rotating

5

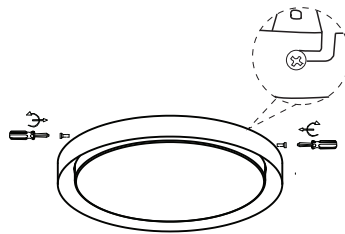

Apply side screws

6

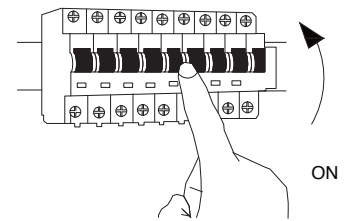

Turn on the general switch

