




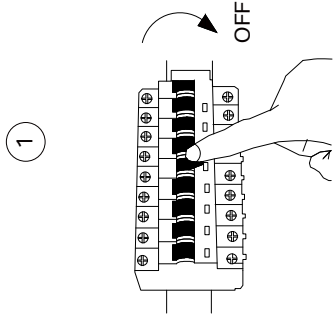


Turn off the general switch

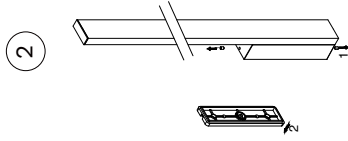


Dismantle the product

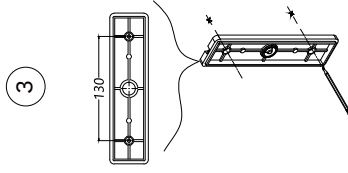


Mark where to drill

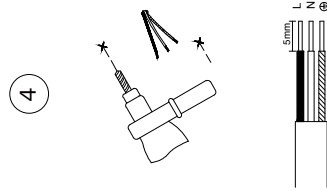


Make sure to have the
Cables in the center

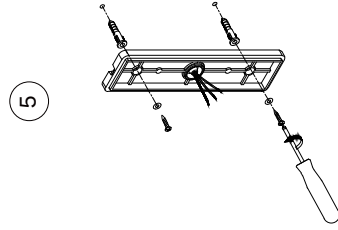


Drill holes apply plastic anchors
With screws

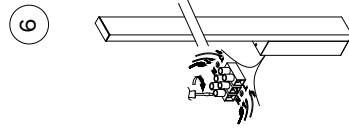

Connect wires

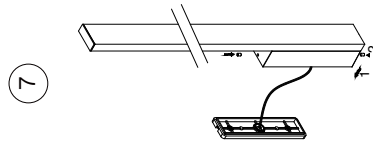

Put it in place & apply
The side nuts

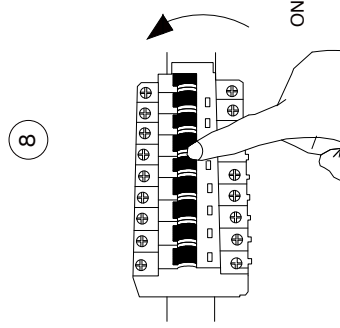

Turn on the general switch

