


NOVA LUCE


600402

1

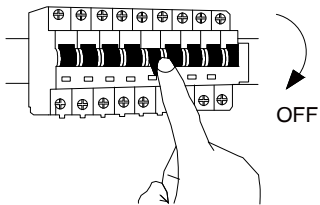


Turn off the general switch

2

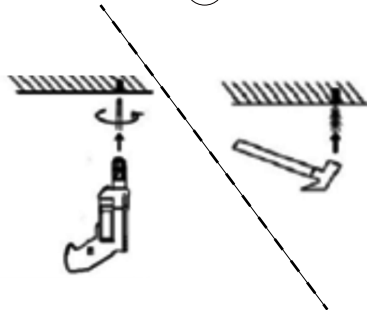


Drill holes & apply plastic anchors

3

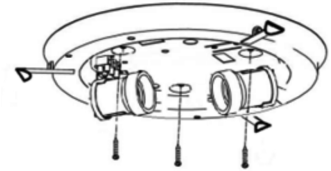


Apply screws

4

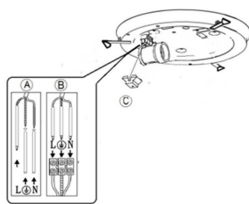


Connect the wires

5

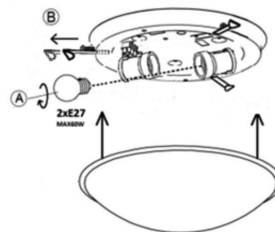

Insert the bulbs & apply the top glass

6

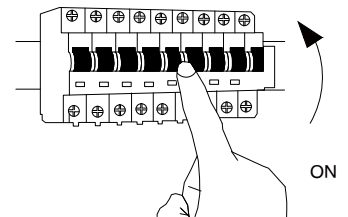

Turn on the general switch

