


NOVA LUCE


9081814/ 9081815/ 9081816

1

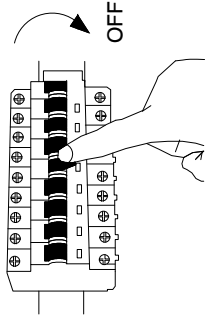


Turn off the general switch

2

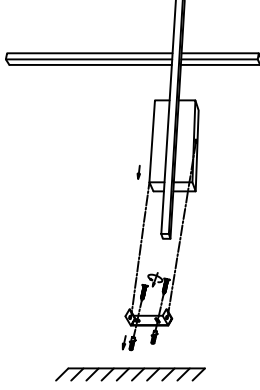


Align, mark & drill holes
Tie up the screws

3

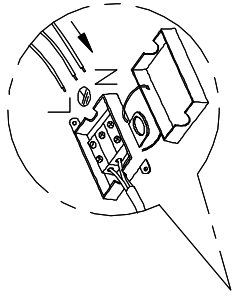


Connect wires

4

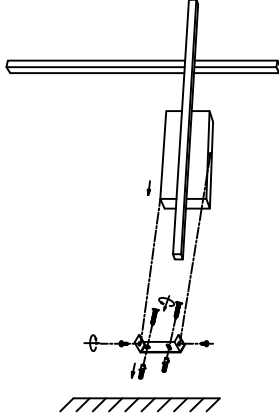

Put it in place
& tie up side screws
to make it stable

5

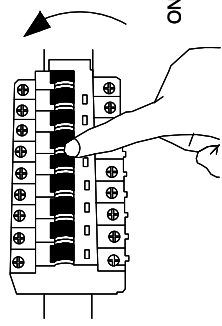

Turn on the general switch

6

