


NOVA LUCE

9236398 9236498

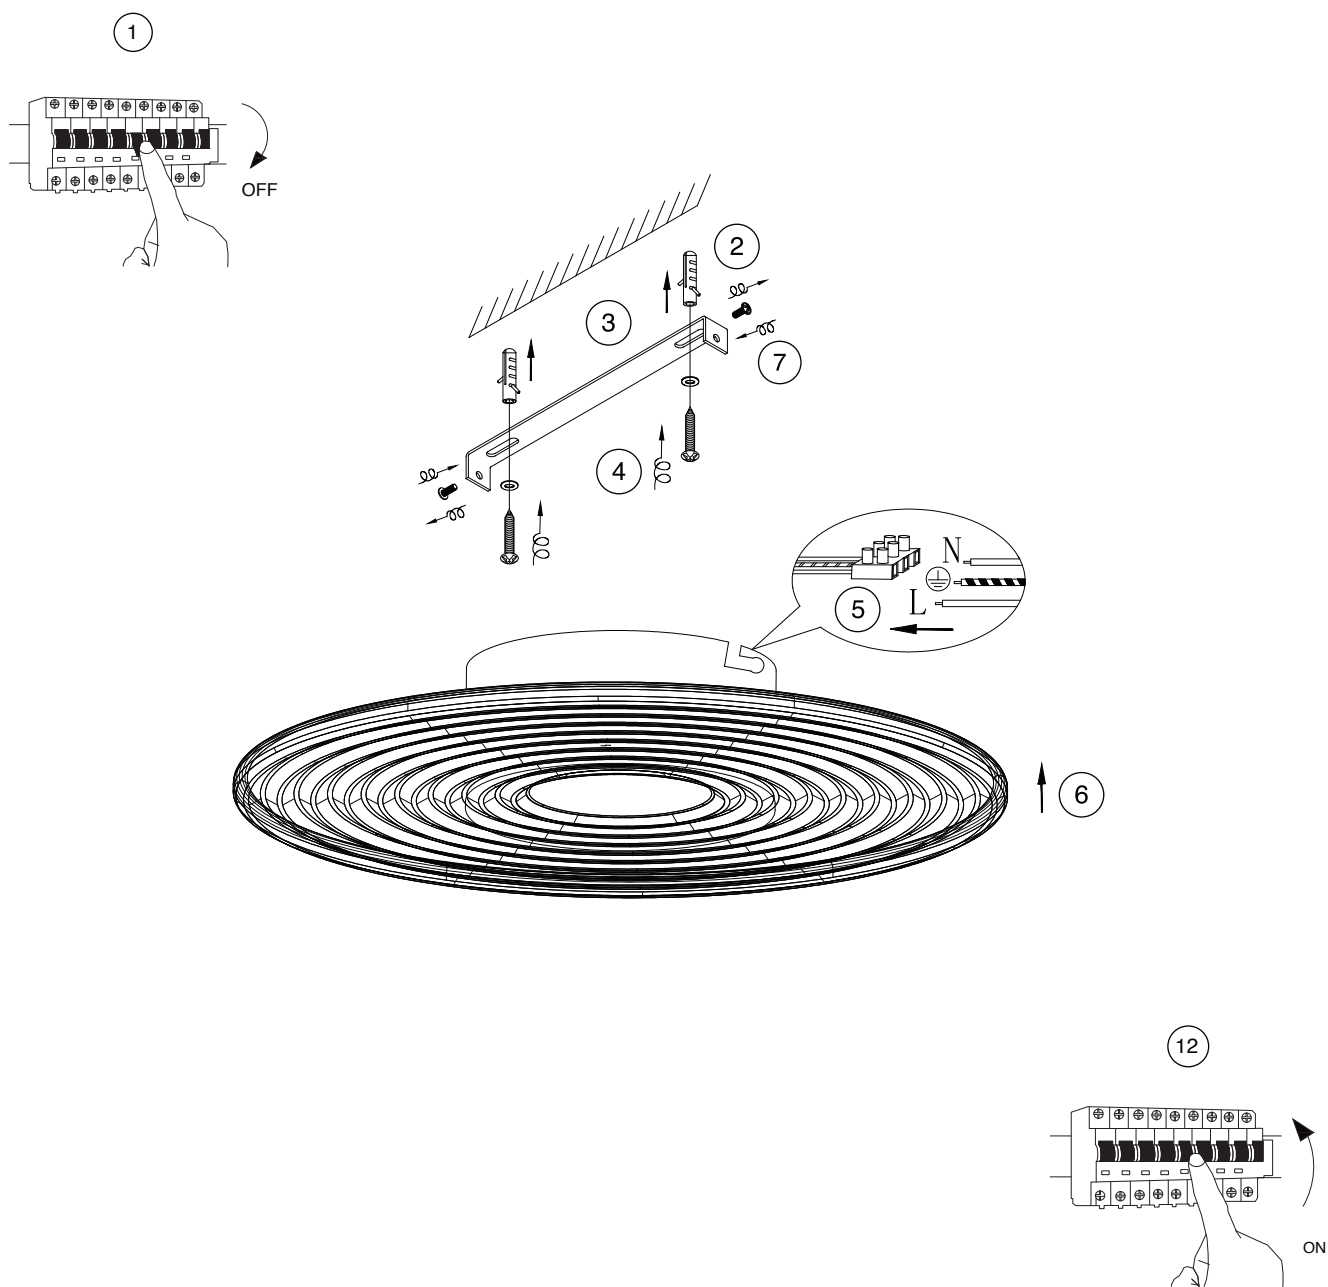

1. Turn off the general switch
2. Drill holes
3. Apply plastic anchors
4. Apply screws
5. Connect wires
6. Put the canopy in place
7. Apply side screws
8. Turn on general switch

