



# NOVA LUCE


9054452

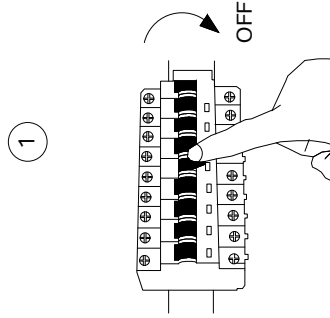


Turn off the general switch

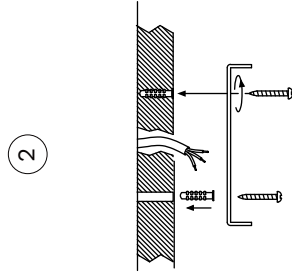


Drill holes apply plastic anchors  
With screws

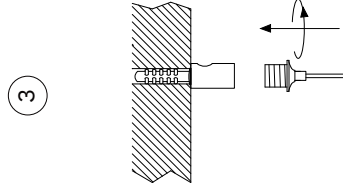


By rotating apply the canopy

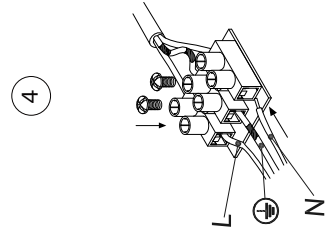


Connect the wires

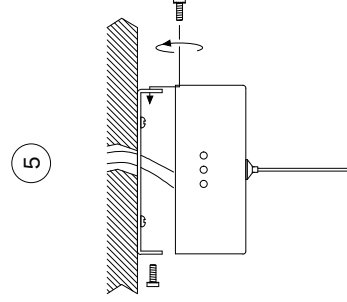

Apply the side screws

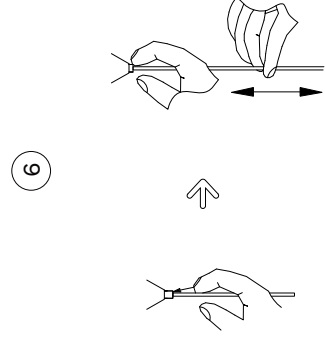

Adjust the wire

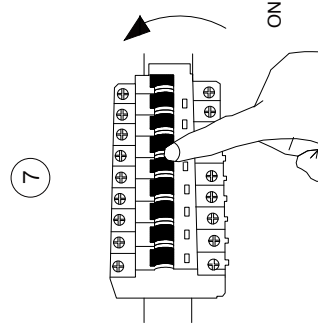

Turn on the general switch

