


# NOVA LUCE

9348074 9348092

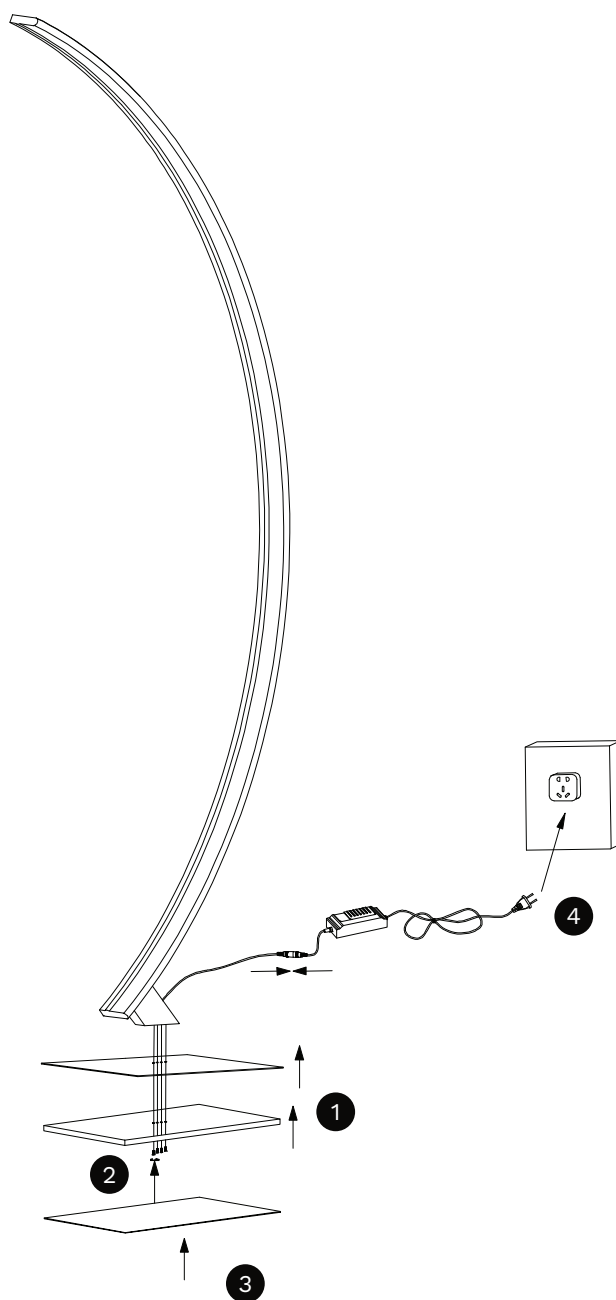

1. Ennable it
2. Apply the screws

3. Apply the bottom part
4. Plug it in

