

# NOVA LUCE


9879103

1




Turn off the general switch

2




Map

3

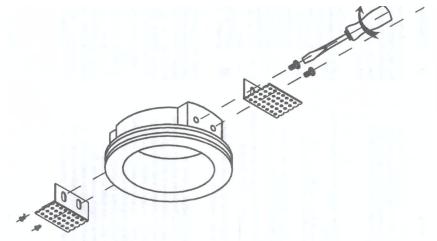


Apply the side screws

4

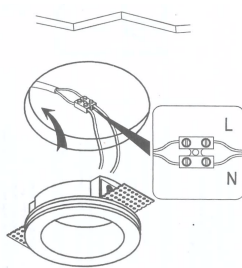


Connect the wires

5

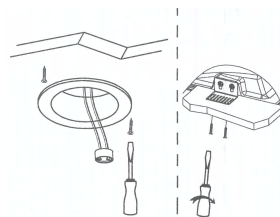


Apply the screws

6

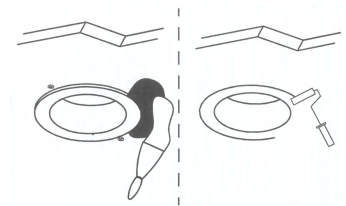


Apply putty powder

7

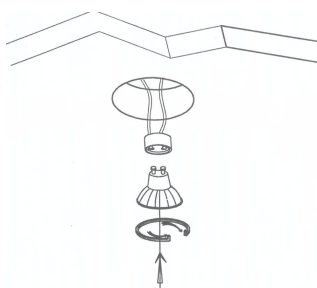

Apply the bulb by rotating

8

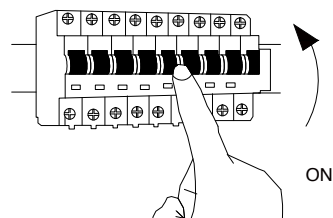

Turn on the general switch

