

NOVA LUCE


9160202

1



Turn off the general switch

2

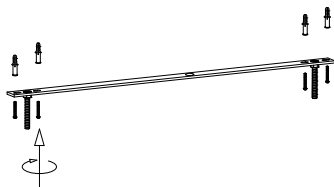


Drill holes & apply plastic anchors
With screws

3




Connect the wires

4

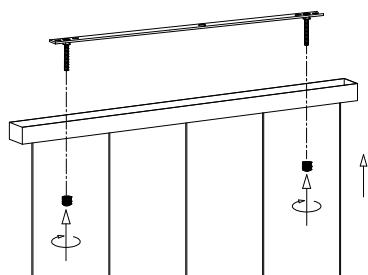


Apply the bottom nuts

5



Apply the glass in to place

6

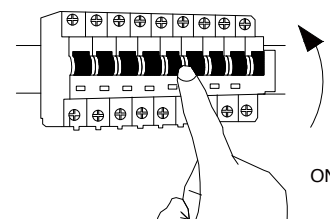

Turn on the general switch

