



# NOVA LUCE


9030526

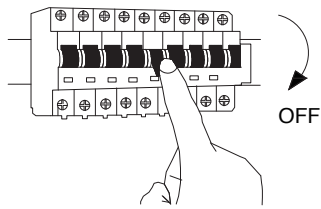


1. Turn off the general switch

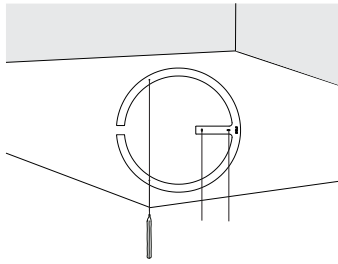


2. Align & mark

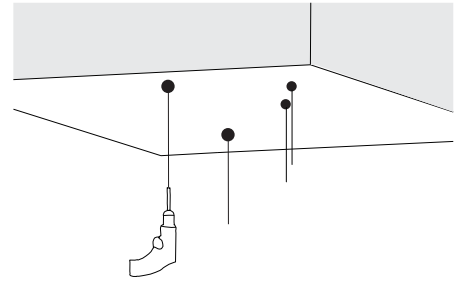


3. Drill holes on the marked areas

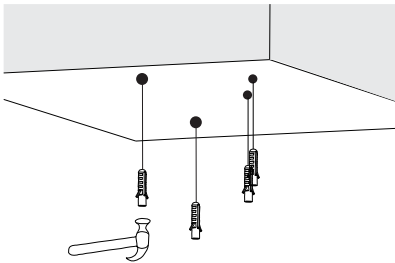


4. Apply plastic anchors

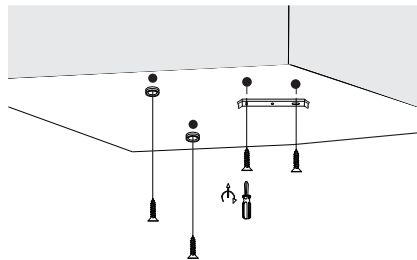


5. Apply the screws

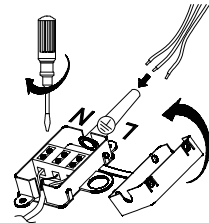


6. Connect the wires

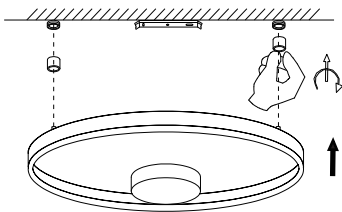

7. Apply the top screws

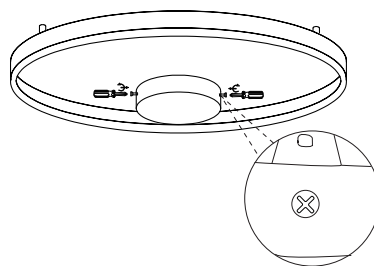

8. Apply the side screws

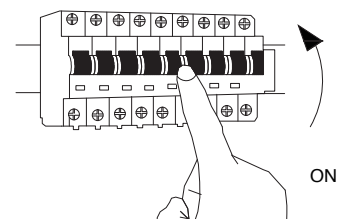

9. Turn on the general switch

