



NOVA LUCE


9001100

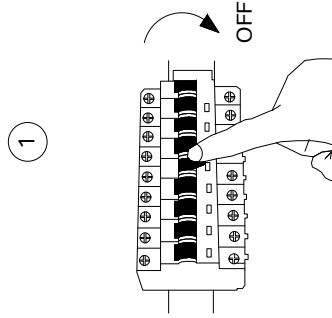


Turn off the general switch

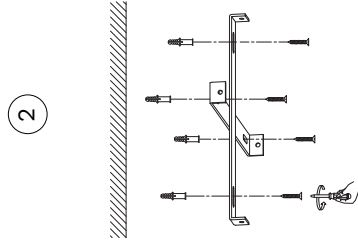


Mark, drill holes & apply plastic anchors with screws

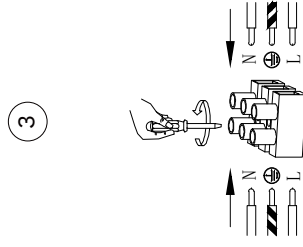

Connect the wires

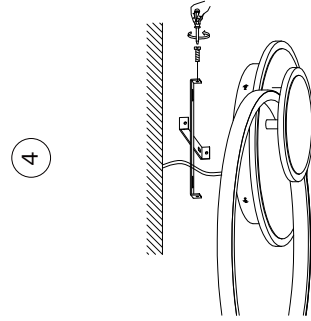

Apply the Side screws

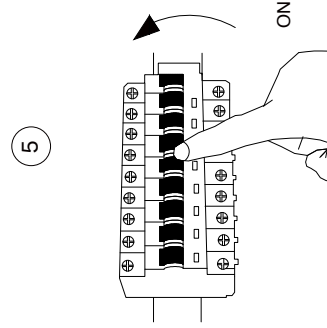

Turn on the general switch

