



# NOVA LUCE

9190856 9190857 9190864




1

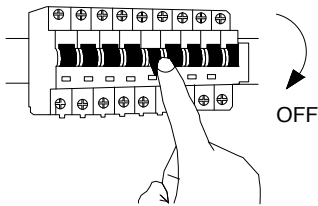


Turn off the general switch

2

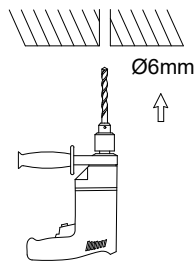


Drill holes

3

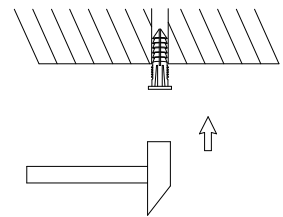


Apply plastic anchors

4

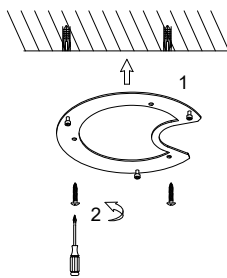


Apply screws

5

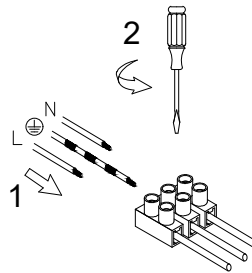


Connect wires

6

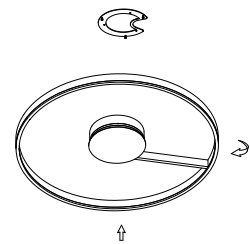

Fix the element in to place

7

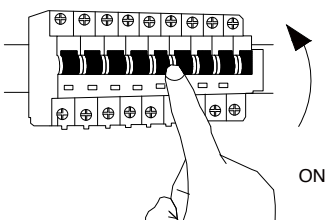

Turn on the general switch

