


# NOVA LUCE


713514

1

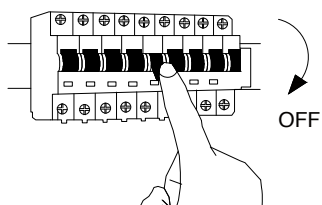


Turn off the general switch

2

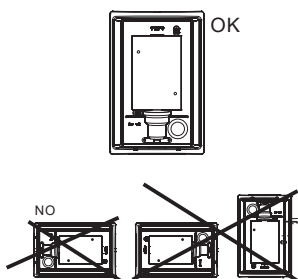


Make sure it is in the  
Correct possession

3

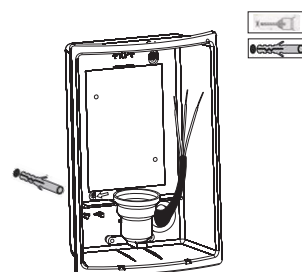


Drill holes & apply plastic anchors

4

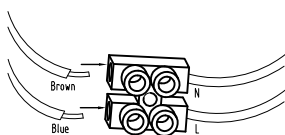

Connect the wires

5

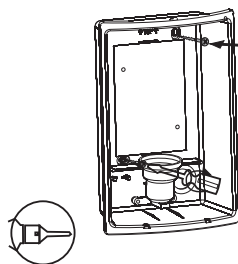


Apply screws

6




By rotating apply the bulb

7

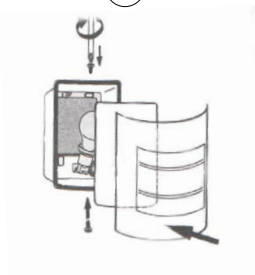

Put it in place & apply the  
Upper & bottom screws

8

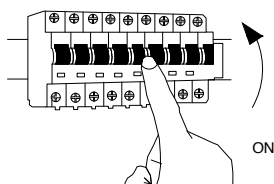

Turn on the general switch

